Epec 3720 Control Unit

Technical Manual and Cabling Instructions

MAN000671



Functional version
3720-21

Document version history

Date	Notes
16.08.2017	First released version

Classification: Public

© Epec Oy

Table of Contents

1 PREFACE 4
1.1 Use of Symbols 4
1.2 Basic Skills Required 5
1.3 Safety Guidelines 6
1.4 Warranty 7
1.5 Limited Liability 8
1.6 Environmental Statement 9

2 PRODUCT OVERVIEW 10

3 TECHNICAL DATA 12

4 INPUT/OUTPUT SPECIFICATIONS 14
4.1 I/O List 14
4.2 Configurable I/Os 18
4.3 PWM/DI/DO_Type051 19
4.3.1 Output (PWM/DO) 19
4.3.2 Input (DI) 19
4.3.3 Functional Block Diagram 21
4.4 PWM/DI/DO_Type051_8 22
4.4.1 Output 22
4.4.2 Input 22
4.4.3 Functional block diagram 23
4.5 FB/AI_Type065_0 24
4.5.1 Functional block diagram 24
4.6 AI/DI_Type064_2 25
4.6.1 DI 25
4.6.2 Functional Block Diagram 26
4.7 AI/DI_Type064_3 27
4.7.1 DI 27
4.7.2 Functional Block Diagram 28
4.8 DI/PI_Type046_1 29
4.8.1 Functional block diagram 29
4.9 AUX OUT 30
4.9.1 Functional block diagram 30
4.10 Loader BSL Pin 31
4.11 +5V REF_Type041_4 32
4.11.1 Protection Features 32
4.11.2 Voltage Monitoring 32
4.11.3 Functional Block Diagram 33
4.11.4 Diagnostics 33
4.12 Power Supply 35
4.12.1 Overvoltage Protection 35
4.12.2 Power Consumption 35

5 BUS CONNECTIONS 37
5.1 CAN Bus 37
5.1.1 CAN interface 37
5.1.2 CAN bus connection pins 37

6 INTERNAL DIAGNOSTICS 38
6.1 Temperature and Voltage Monitoring 38
6.1.1 Temperature 38
6.2 Error Log 39

7 APPROVALS AND SAFETY 40

Epec Oy reserves all rights for improvements without prior notice

7.1 EMC Tests 40
7.2 Environmental Tests 45

8 MECHANICS AND CABLING 47
8.1 Unit Dimensions 47
8.2 Mounting and Cleaning 48
8.3 Plugging and unplugging the connectors 51
8.4 Cabling 53
8.4.1 System Topologies 53
8.4.2 CAN Bus Cabling 56
8.4.3 I/O Cabling 58
8.4.4 Power Supply Cabling 60
8.5 Welding 64
8.6 System Examples 65
8.7 Accessories and Ordering Codes 67

Epec Oy reserves all rights for improvements without prior notice

1 PREFACE

1.1 Use of Symbols

This manual uses the following symbols to point out important information or safety instructions:



The information icon indicates important information and issues to be noted for the reader.



The caution icon indicates very important information or a warning. If the advices are ignored, it can result in personal injury or damage to software or equipment.



The (electrical) warning icon indicates a hazard which could cause an electrical danger and/or a personal injury.

This product uses the following symbols to point out important information or safety instructions:



CE compatibility
This symbol indicates that the product complies with the requirements set in the CE Standard.



WEEE symbol
This symbol indicates that the product must be sent to separate collection facilities for recovery and recycling when the end-user wishes to discard the product.



E17 Approval
This symbol indicates that the product is certified with normal automotive (E17) EMC (electromagnetic compatibility) standards.

Epec Oy reserves all rights for improvements without prior notice

1.2 Basic Skills Required

The user of this document must have basic knowledge of machine controlling, CAN communication, PLCopen programming according to IEC61131-3 and should have skills to use CODESYS 3.5 programming environment.

Refer to CODESYS manual for further information concerning the programming environment and required installations.

Refer to CAN and CANopen documentation from CAN in Automation (CiA) for further information on communication issues.

Epec Oy reserves all rights for improvements without prior notice

Epec Oy

Postal address
PL/P.O.Box 194
FIN-60101 Seinäjoki, Finland

Phone
+358-(0)20-7608 111

Internet
www.epec.fi

1.3 Safety Guidelines

The user of this documentation should follow general machine safety guidelines, directives and regulation appropriate to their country or market area.

A separate safety analysis is always recommended for the machine and its control system. The features of this product should be well documented in machine and control system documents so that the machine operator has the right information how to operate the machine correctly and safely.

This product is designed to be used only for machine controlling purposes. The manufacturer does not assume any responsibility for this product being fit for any particular application, unless otherwise expressly stated in writing by the manufacturer.

This product complies with those certifications and standards that are mentioned in this manual. The manufacturer does not guarantee that this product complies with any other certification, standard or test other than mentioned in this manual.

This product is not field serviceable, so it should not be opened at any situation.

External fuses should be installed for the product or the system power supply.

The system should be designed and constructed according to the Epec general mounting and cabling instruction document.

Epec Oy reserves a right to improve its products without a further notice.

Epec Oy reserves all rights for improvements without prior notice

Epec Oy

Postal address
PL/P.O.Box 194
FIN-60101 Seinäjoki, Finland

Phone
+358-(0)20-7608 111

Internet
www.epec.fi

1.4 Warranty

The manufacturer does not assume any responsibility for the products being fit for any particular purpose, unless otherwise expressly stated in writing by the manufacturer.

The manufacturer gives the warranty of twelve (12) months to the products and thereto related firmware from commissioning or eighteen (18) months from the date of delivery of the products which ever occurs first.

The manufacturer is during the warranty period responsible for defects in the products and thereto related firmware resulting from faults in material, design or workmanship. The manufacturer's only obligation under this warranty is to, at its sole discretion, either to replace the products and/or thereto related firmware or to repair the defective products. The manufacturer shall, at its sole option, repair the products at its manufactory in Seinäjoki, Finland.

The warranty does not cover any costs related to removing or fastening of devices related to the products. Neither does the warranty cover the expenses of sending devices to or from the manufacturer for repairs. The warranty does not cover possible expenses relating to travelling, accommodation, daily benefits, etc. of installers.

The warranty becomes null and void if the buyer and/or a third party alters the products or the firmware in any way or if they are not used in accordance with the Manufacturer's operating instructions.

All claims with respect to defects in the products shall be made to the manufacturer without delay and no later than on the seventh (7th) day after the defect has been or should have been discovered by the buyer. The manufacturer strives to reply to the claim in writing within two (2) weeks from the receipt of the claim. The buyer shall attach to the claim a possible error report or equivalent explanation of the grounds for the claim.

The manufacturer gives no other warranties whatsoever for the products than the warranty set out in this section and thus the warranty given in this section sets forth the warranty given by the manufacturer in its entirety.

Epec Oy reserves all rights for improvements without prior notice

Epec Oy

Postal address
PL/P.O.Box 194
FIN-60101 Seinäjoki, Finland

Phone
+358-(0)20-7608 111

Internet
www.epec.fi

1.5 Limited Liability

The manufacturer shall under no circumstances be liable for loss of production, loss of profit, loss of use or any other consequential damages and/or indirect losses, whatever their cause may be. In case claims based on product liability are brought against the Manufacturer for which claims the manufacturer may be liable, the manufacturer's liability is limited to the extent normally covered under normal product liability insurances.

The buyer shall compensate the manufacturer to the extent that the manufacturer might be liable to pay damages as a result of claims based on product liability according to paragraph above.

Epec Oy reserves all rights for improvements without prior notice

Epec Oy
Postal address
PL/P.O.Box 194
FIN-60101 Seinäjoki, Finland
Phone
+358-(0)20-7608 111
Internet
www.epec.fi

1.6 Environmental Statement

The manufacturer uses ISO14001 environmental certified processes and materials to manufacture products. The manufacturer undertakes to arrange for the recycling and scrapping of the products that are returned to the manufacturer by the buyer and/or the products that are received by the Manufacturer in connection with maintenance services performed as a result of that repairing of the products is deemed by the Manufacturer to be inappropriate.

The manufacturer will charge a scrapping fee from the buyer according to the manufacturer's price list in force from time to time. No scrapping fee will, however, be charged for products that are received by the manufacturer during the warranty period.

WEEE
This product complies with the European Community Directive 2012/19/EU on waste electrical and electronic equipment (WEEE) encouraging and setting specific criteria for the collection, handling and recycling of electric and electronic waste.

RoHS
This product complies with the European Community Directive 2011/65/EU (RoHS) restricting hazardous substances such as quicksilver and lead in electrical and electronic equipment.

Epec Oy reserves all rights for improvements without prior notice

2 PRODUCT OVERVIEW



Epec 3720 Control Unit is a compact and robust multifunction controller with 16-bit processor and high calculating power. Epec 3000 product platform is fully compatible to the existing Epec product portfolio. Some of the advances of the Epec 3720 Control Unit are listed below.

Multifunctional Efficiency

- A multifunction controller
  - 16/32 bit processor
  - high calculating power
- Can be used used in a CAN control unit system as a controller with different kinds of sensors and actuators, such as
  - proportional valves,
  - servo motors, and
  - electro-hydraulic components
- Provides control system solutions for both centralized and distributed intelligence systems
- Fully compatible with the existing Epec product portfolio

Mechanics & hardware

- Robust, light and leak proof aluminum cover has been widely tested against different chemicals and environmental conditions
- The shape of the casing works to protect the electronics inside against mechanical wear.
- Equipped with gold plated, heavy duty AMPSEAL connectors
- Each connector is color coded and mechanically keyed to fit only to the correct, corresponding place
- Made in Finland

Versatile I/O capabilities

- Total of 59 I/O pins
- Most pins have multipurpose features
- All I/O pins are equipped with a short-circuit protection

Epec Oy reserves all rights for improvements without prior notice

Application programming

- Application downloading is possible through CAN bus
- Epec products are based on PLCopen and CANopen®, which make them easily scalable to meet requirements for both small and large machines
- Open I/O and communication interface, thus making it possible to connect
    - sensors,
    - actuators,
    - joysticks, and
    - other devices

  from other manufacturers to optimize the whole machine environment, both technically and ergonomically.
- Internal diagnostics which makes it possible to
    - detect e.g. overvoltage and overtemperature alarms and
    - program customized log applications

Epec Oy reserves all rights for improvements without prior notice

3 TECHNICAL DATA

Processor	16/32 bit CPU, 100 MHz
Memory	Flash memory: total 1600 kbytes RAM memory: 1024 kbyte + 138 kbyte (112kbyte for PLCopen application variables) Non-volatile memory: 8 kbyte PLCopen application size up to 768 kbyte
Power	Nominal supply voltage 12/24 VDC systems (8,5 ... 33 VDC) Idle power consumption 1,5 W (+24 VDC, no external load)
REF voltage outputs	+5 V
Diagnostics	Supply voltage Unit temperature REF voltage monitoring Internal voltage monitoring
Protection functions	Overvoltage protection Short-circuit protection for outputs
Programming	CODESYS 2.3
Software installation	Download via CAN1
Protection class	IP67
Size / Outer dimensions	147 x 113 x 46 mm 5.787 x 4.448 x 1.811 in
Weight	0,70 kg 1.54 lbs
Case material	Aluminum
Operating temperature	-40... +85˚C -40...+185˚F
Storage temperature	-40... +85˚C -40...+185˚F
Connectors	3 x AMP23 1 x AMP8
Communications/ Interfaces	2 x CAN 2.0B
I/O pins total	59

Epec Oy reserves all rights for improvements without prior notice

Outputs	24 x	PWM/DO/DI (sourcing, up to 3 A, PWM frequency by application)
Inputs	20 x (10 pairs)	FB/AI (current measuring feedback, 0-2 A)
	6 x	AI/DI (0-5 V / 0-22 mA selection by application)
	9 x	DI/PI (pull-up to +5 V)

Epec Oy reserves all rights for improvements without prior notice

Epec Oy

Postal address
PL/P.O.Box 194
FIN-60101 Seinäjoki, Finland


Phone
+358-(0)20-7608 111

Internet
www.epec.fi

4 INPUT/OUTPUT SPECIFICATIONS

4.1 I/O List

The four connectors are placed in the control unit according to the following figure:

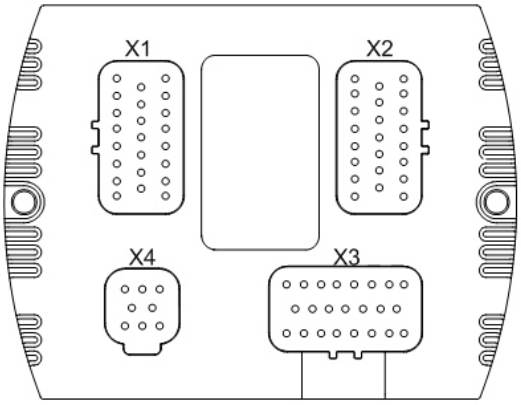

The following table lists the pins according their pin number. Other columns offer quick information about the pin and links for more information.

The group column:
* **smaller case characters** indicate the input groups (the pins in the same group have the same configurations)
UPPER CASE CHARACTERS indicate the output groups (the pins in the same group have the same configurations)

Connector 1:

Pin number	Pin type	Details	Group*	Current / Voltage	Description
First row:					
X1.1	PWM/DI/DO_Type051	10 kΩ GND		Nominal current 3 A	
X1.2	PWM/DI/DO_Type051	10 kΩ GND		Nominal current 3 A	
X1.3	FB/AI_Type065_0	0,1 Ω GND	a	0-2 A	
X1.4	Cross connected FB/AI		a		
X1.5	FB/AI_Type065_0	0,1 Ω GND	b	0-2 A	
X1.6	Cross connected FB/AI		b		
X1.7	PWM/DI/DO_Type051_8	10 kΩ +24 V	A	Nominal current 3 A	
X1.8	PWM/DI/DO_Type051_8	10 kΩ +24 V	A	Nominal current 3 A	
Second row:					
X1.9	PWM/DI/DO_Type051	10 kΩ GND	B	Nominal current 3 A	
X1.10	FB/AI_Type065_0	0,1 Ω GND	c	0-2 A	
X1.11	PWM/DI/DO_Type051_8	10 kΩ +24 V		Nominal current 3 A	
X1.12	GND				

Epec Oy reserves all rights for improvements without prior notice

X1.13	PWM/DI/DO_Type051_8	10 kΩ +24 V		Nominal current 3 A	
X1.14	FB/AI_Type065_0	0,1 Ω GND	d	0-2 A	
X1.15	PWM/DI/DO_Type051	10 kΩ GND	B	Nominal current 3 A	
Third row:					
X1.16	PWM/DI/DO_Type051	10 kΩ GND	B	Nominal current 3 A	
X1.17	Cross connected FB/AI		c		
X1.18	PWM/DI/DO_Type051	10 kΩ GND	B	Nominal current 3 A	
X1.19	PWM/DI/DO_Type051	10 kΩ GND	B	Nominal current 3 A	
X1.20	FB/AI_Type065_0	0,1 Ω GND	e	0-2 A	
X1.21	Cross connected FB/AI		e		
X1.22	Cross connected FB/AI		d		
X1.23	PWM/DI/DO_Type051	10 kΩ GND	B	Nominal current 3 A	

Connector 2:

Pin number	Pin type	Details	Group*	Current / Voltage	Description
First row:					
X2.1	PWM/DI/DO_Type051_8	10 kΩ +24 V		Nominal current 3 A	
X2.2	PWM/DI/DO_Type051_8	10 kΩ +24 V		Nominal current 3 A	
X2.3	FB/AI_Type065_0	0,1 Ω GND	f	0-2 A	
X2.4	Cross connected FB/AI		f		
X2.5	FB/AI_Type065_0	0,1 Ω GND	g	0-2 A	
X2.6	Cross connected FB/AI		g		
X2.7	PWM/DI/DO_Type051_8	10 kΩ +24 V	B	Nominal current 3 A	
X2.8	PWM/DI/DO_Type051_8	10 kΩ +24 V	B	Nominal current 3 A	
Second row:					
X2.9	PWM/DI/DO_Type051_8	10 kΩ +24 V	A	Nominal current 3 A	
X2.10	FB/AI_Type065_0	0,1 Ω GND	h	0-2 A	
X2.11	PWM/DI/DO_Type051_8	10 kΩ +24 V		Nominal current 3 A	
X2.12	GND				
X2.13	PWM/DI/DO_Type051_8	10 kΩ +24 V		Nominal current 3 A	
X2.14	FB/AI_Type065_0	0,1 Ω GND	i	0-2 A	
X2.15	PWM/DI/DO_Type051_8	10 kΩ +24 V	A	Nominal current 3 A	
Third row:					
X2.16	PWM/DI/DO_Type051_8	10 kΩ +24 V	A	Nominal current 3 A	

Epec Oy reserves all rights for improvements without prior notice

X2.17	Cross connected FB/AI		h		
X2.18	PWM/DI/DO_Type051_8	10 kΩ +24 V	A	Nominal current 3 A	
X2.19	PWM/DI/DO_Type051_8	10 kΩ +24 V	A	Nominal current 3 A	
X2.20	FB/AI_Type065_0	0,1 Ω GND	j	0-2 A	
X2.21	Cross connected FB/AI		j		
X2.22	Cross connected FB/AI		i		
X2.23	PWM/DI/DO_Type051_8	10 kΩ +24 V	A	Nominal current 3 A	

Connector 3:

Pin number	Pin type	Details	Group*	Current / Voltage	Description
First row:					
X3.1	AUX OUT (U = U_{in})	10 kΩ GND		max. 4 A	Shared current with pin 3.9
X3.2	REF +5V_Type041_4			+5 V 270 mA	
X3.3	AI/DI_Type064_2	2,2 kΩ +5 V / 220 Ω GND		0-5 V / 0-22 mA	
X3.4	AI/DI_Type064_3	82 kΩ GND / 220 Ω GND		0-5 V / 0-22 mA	
X3.5	AI/DI_Type064_3	82 kΩ GND / 220 Ω GND		0-5 V / 0-22 mA	
X3.6	AI/DI_Type064_3	82 kΩ GND / 220 Ω GND		0-5 V / 0-22 mA	
X3.7	AI/DI_Type064_3	82 kΩ GND / 220 Ω GND		0-5 V / 0-22 mA	
X3.8	AI/DI_Type064_3	82 kΩ GND / 220 Ω GND		0-5 V / 0-22 mA	
Second row:					
X3.9	AUX OUT (U = U_{in})	10 kΩ GND		max. 4 A	Shared current with pin 3.1
X3.10	GND				
X3.11	GND				
X3.12	GND				
X3.13	GND				
X3.14	DI/PI_Type046_1	10 kΩ +5 V			
X3.15	LOADER BSL				
Third row:					
X3.16	DI/PI_Type046_1	10 kΩ +5 V			
X3.17	DI/PI_Type046_1	10 kΩ +5 V			
X3.18	DI/PI_Type046_1	10 kΩ +5 V			
X3.19	DI/PI_Type046_1	10 kΩ +5 V			
X3.20	DI/PI_Type046_1	10 kΩ +5 V			

Epec Oy reserves all rights for improvements without prior notice

X3.21	DI/PI_Type046_1	10 kΩ +5 V			
X3.22	DI/PI_Type046_1	10 kΩ +5 V			
X3.23	DI/PI_Type046_1	10 kΩ +5 V			

Connector 4:

Pin number	Pin type	Details	Group*	Current / Voltage	Description
X4.1	GND	Supply GND			
X4.2	CAN1 H				
X4.3	GND	Supply GND			
X4.4	Power Supply				
X4.5	Power Supply				
X4.6	CAN1 L				
X4.7	CAN2 H				
X4.8	CAN2 L				

Epec Oy reserves all rights for improvements without prior notice

4.2 Configurable I/Os

Control unit contains inputs and outputs or, in other words, I/O pins of many different types. There are, for example, outputs which source current and outputs which sink current. Furthermore, there are I/O pins which can be used as inputs or as outputs at the control of the application programmer.

The following table contains a summary of configurable I/O pins in Epec 3720 control unit:

Max Amount	Pin Type	Info	DI	AI	FB	PI	DO		PWM
							PNP (sourcing)	NPN (sinking)	
8	PWM/DO/DI_Type051	3 A, pull-down to GND	x				x		x
16	PWM/DI/DO_Type051_8	3 A, pull-up to +24 V	x				x		x
20 (10 pairs)	FB/AI_Type065_0	0-2 A			x				
1	AI/DI_Type064_2	0-5 V / 0-22 mA	x	x					
5	AI/DI_Type064_3	0-5 V / 0-22 mA	x	x					
9	DI/PI_Type046_1	pull-up to +5 V	x			x			

Epec Oy reserves all rights for improvements without prior notice

4.3 PWM/DI/DO_Type051

4.3.1 Output (PWM/DO)

- These pins are current sourcing outputs.
  - In other words, pin connects the load to positive supply voltage.
- The application program can also simultaneously monitor the actual state of the pin.
  - This feature makes it possible to detect short circuits to the ground and short circuits to the power supply.
  - Open loads can not be detected because the internal load resistor is connected to the ground.

- These kind of outputs are also capable to generate pulse width modulated (PWM) output signals.
  - This feature is useful when driving proportionally controlled loads, e.g. proportional hydraulic valves.

- PWM frequencies can be configured under software control in groups of outputs.
  - The setting is done by a PWM channel, setting the frequency of one channel sets also the frequencies of all the other channels in the same group.
  - The groups are indicated with upper case characters in the pin table's Group column in section *I/O List*).

- These outputs have integrated protection features (overload, overcurrent)
- This kind of pin can be used with a step motor (for more information refer to the Programming and Libraries manual)



If you want to use current measuring, connect the other end of the load to the feedback pin.



It is recommended to use the function blocks in *DigitalOutputDiagnostics* library to protect and diagnose outputs when used as digital outputs. For more information, refer to *Epec Programming and Libraries Manual*.

4.3.2 Input (DI)

- This pin can be used as a digital input (DI)
- A pin of this type can also be used as an input by using the output state monitoring feature.
  - In this case, the output functionality of the pin must be kept in the off state.



Closed circuit loops are mandatory when you are using DO or PWM pin as an input.
Closed circuit loop means that the current from the control unit to the sensor must return to the same control unit, see the figures in section *I/O Cabling*.


Epec Oy reserves all rights for improvements without prior notice

Symbol	Parameter	Conditions	Min	Max	Units
R_O	Output Resistance	Output On		0,2	Ω
I_O	Output Current	Output On	0	3	A
$I_{o\text{-}lim}$	Internal current limitation	Output On (Note 2, 3)	typ. 12		A
f_{PWM}	PWM Frequency	(Note 1)	10	3000	Hz
$Duty_{PWM}$	Duty Cycle	(Note 4, 9)	0 to 100,0		%
Res_{PWM}	PWM Resolution	(Note 1, 8)	0,1		%
Digital status input					
R_I	Input Resistance	Output Off; Referenced to GND	typ. 10		kΩ
V_{IH}	Input High Voltage	Output Off (Note 7)	3,5	U_{in}	V
V_{IL}	Input Low Voltage	Output Off	-0,5	1,5	V
f_I	Input frequency (digital input)	50% duty cycle (Note 4, 5)		1/ 2tC	Hz
t_I	Digital Status Input Pulse Width	(Note 5, 6)	> tC		ms
C_O	Output pin capacitance		typ. 1		nF

Note 1: PWM capable outputs are divided into groups. All outputs in the same group share the same PWM frequency (default value 10 Hz). The groups are indicated with upper case characters in the pin table's Group column in section *I/O List*.
Note 2: Current limit for short circuit protection to protect cabling and to limit internal power dissipation.
Note 3: When the limit is exceeded, the output voltage circuit starts to limit the current by switching the output voltage. The switching does not effect the application software.
Note 4: The duty cycle is defined as the percentage of digital 'high' to digital 'low' signals present during a PWM period.
Note 5: tC denotes the software cycle time.
Note 6: The pulse width must be greater that the software cycle time. For example with 50/50 pulse ratio, the pulse frequency is 1 / (2*pulse width)
Note 7: Exceeding the max value might cause permanent damage.
Note 8: The PWM resolution is defined as a maximum number of pulses that you can pack into a PWM period.
Note 9: When the frequency increases, the actual duty cycle may be bigger than the value that has been set.

Epec Oy reserves all rights for improvements without prior notice

4.3.3 Functional Block Diagram

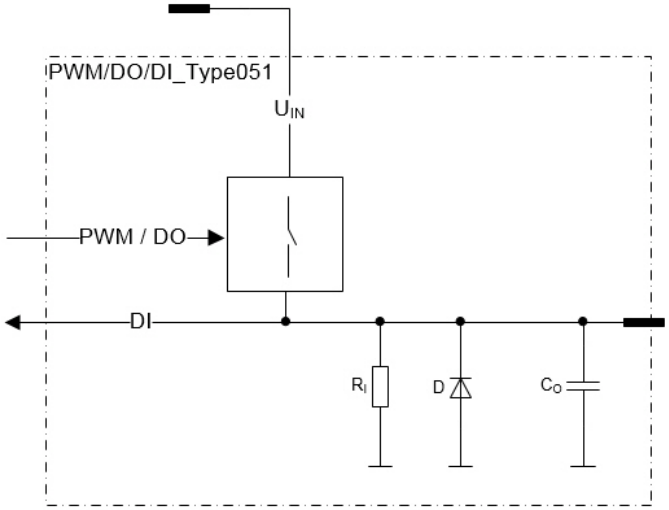

Epec Oy reserves all rights for improvements without prior notice

4.4 PWM/DI/DO_Type051_8

4.4.1 Output

- This type of pin is a current sourcing output with a pull-up resistor
-
    - In other words, the pin connects the load to a positive supply voltage
- The pull-up feature is for open load detection when the pin is used as an output.
- These outputs have integrated protection features (overload, overcurrent)
- These outputs are capable to generate pulse width modulated (PWM) output signals.
- When used as an output, the input feature indicates the output FET's state
- This kind of pin can be used with a step motor (for more information refer to the Programming and Libraries manual)

If you want to use current measuring, connect the other end of the load to the feedback pin.

It is recommended to use the function blocks in *DigitalOutputDiagnostics* library to protect and diagnose outputs when used as digital outputs. For more information, refer to *Epec Programming and Libraries Manual*.

4.4.2 Input

- This pin can be used as a digital input (DI)
- This pin can be used also with NPN-type sensors – sensors with open collector/open drain.
- A pin of this type can also be used as an input by using the output state monitoring feature.
    - In those cases the output functionality of the pin must be kept in off state.
- It must be taken care in system design that the output unintentionally switching to on state causes no harm to the system.
- It's highly recommended to use closed loop connections when the output pin is used as input. By keeping this simple principle in your mind you will avoid many unknown problems later on.

Electrical characteristics


Symbol	Parameter	Conditions	Min	Max	Units
R_O	Output Resistance	Output On		0,2	Ω
I_O	Output Current	Output On	0	3	A
$I_{o\text{-}lim}$	Internal current limitation	Output On (Note 1, 2)	typ. 12		A
f_{PWM}	PWM Frequency	(Note 6)	10	3000	Hz
$Duty_{PWM}$	Duty Cycle	(Note 3, 9)	0	100,0	%
Res_{PWM}	PWM Resolution	(Note 8)		0,1	%

Epec Oy reserves all rights for improvements without prior notice

Digital status input					
R_I	Input Resistance	Output Off; Referenced to U_{in}	typ. 10		kΩ
$V_{I\text{-}level}$	Input voltage level	Output Off; Unconnected pin	U_{in}		V
V_{IH}	Input High Voltage	Output Off (Note 7)	3,5	U_{in}	V
V_{IL}	Input Low Voltage	Output Off	-0,5	1,5	V
f_I	Input frequency (digital input)	50% duty cycle (Note 3, 4)		1/ $2t_C$	Hz
t_I	Digital Status Input Pulse Width	(Note 4, 5)	> t_C		ms
C_O	Output pin capacitance		typ. 1		nF

Note 1: Current limit for short circuit protection to protect cabling and to limit internal power dissipation.
Note 2: When the limit is exceeded, the output voltage circuit starts to limit the current by switching the output voltage. The switching does not effect the application software
Note 3: The duty cycle is defined as the percentage of digital 'high' to digital 'low' signals present during a PWM period.
Note 4: t_C denotes the software cycle time.
Note 5: The pulse width must be greater that the software cycle time. For example with 50/50 pulse ratio, the pulse frequency is 1 / (2*pulse width)
Note 6: PWM capable outputs are divided into groups. All outputs in the same group share the same PWM frequency (default value 10 Hz). The groups are indicated with upper case characters in the pin table's Group column in section *I/O List*.
Note 7: Exceeding the max value might cause permanent damage.
Note 8: The PWM resolution is defined as a maximum number of pulses that you can pack into a PWM period.
Note 9: When the frequency increases, the actual duty cycle may be bigger than the value that has been set.

4.4.3 Functional block diagram

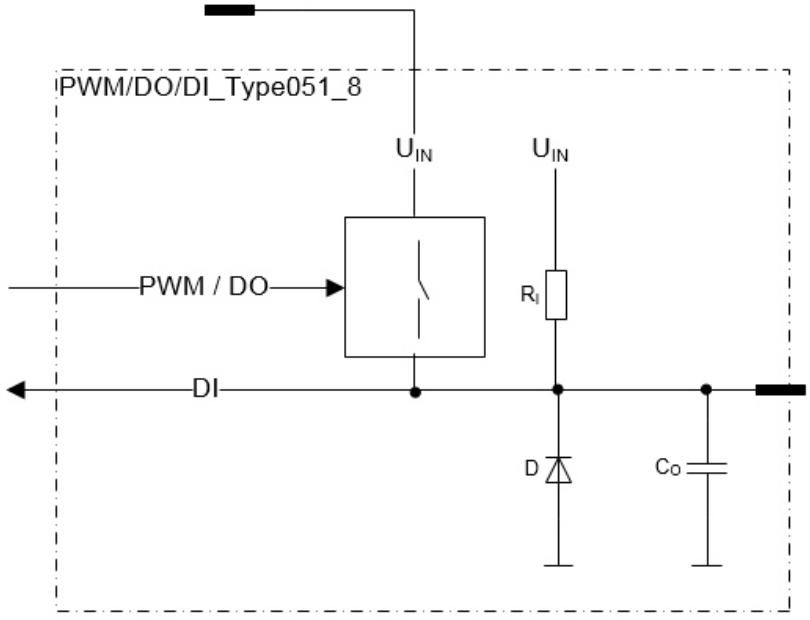

Epec Oy reserves all rights for improvements without prior notice

4.5 FB/AI_Type065_0


- This type of pin is 0-2 A current measuring feedback
- These pins are normally used as a return path for the loads of PWM outputs
- These kinds of pins have a small shunt resistor connected to ground
  - The shunt resistor is used to measure the current flowing through the load
- Nothing prevents using these pins to measure currents from other sources as well
- These pins are paired and are indicated with lower case characters in section *I/O List*

Electrical characteristics

Symbol	Parameter	Conditions	Min	Max	Units
R_I	Input Resistance		typ. 0,1		Ω
I_I	Input Current	Analog measuring range	0	2,27	A
		(Note 1)		2,3	A
BW	Input Low Pass Filter Bandwidth	-3 dB cut-off frequency (Note 2)	typ. 27		Hz
I_E	Input Error	I_I = 2 A; Calculated		135	mA

Note 1: Exceeding the max value might cause damage to input.
Note 2: 2nd order low pass filter

4.5.1 Functional block diagram

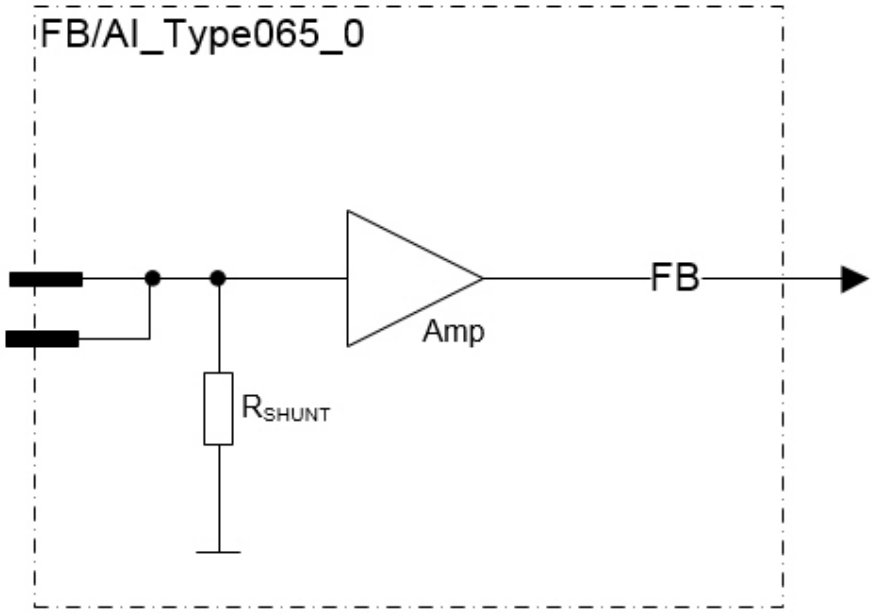

Epec Oy reserves all rights for improvements without prior notice

4.6 AI/DI_Type064_2

- These pins are analog inputs
- There is an internal 2,2 kΩ resistor connected to +5 V in the unit.
  - It provides appropriate measuring current for the external sensor. Any resistive sensor with reasonable resistance range can be used.

- The pins can be configured either as a current input or as a voltage input.
- There is a control signal for selecting:
  - Voltage mode: High impedance input for signal from 0 to 5 V
  - Current mode: Low impedance input for signal from 0 to 22 mA

- The input impedance of each pin is controlled by a bit in output memory (%Q)



When configured to current mode, analog inputs can be protected against overvoltage by using *3000AnalogInputProtection* programming library. For more information, refer to *Epec Programming and Libraries Manual*.

4.6.1 DI

- These pins can also be used as digital inputs by using an application library.
- The pin must be configured to voltage mode when using as digital input


Electrical characteristics

Symbol	Parameter	Conditions	Min	Max	Units
V_I	Input Voltage measuring range		0	5	V
R_I	Input Resistance	Voltage mode (referenced to +5 V)	typ. 2,2 ±1%		kΩ
		Current mode	typ. 220		Ω
I_I	Input Current measuring range		0	22,7	mA
I_E	Input Error	Voltage mode		0,18	V
		Current mode		0,8	mA
BW	Input Low Pass Filter Bandwidth	-3 dB cut-off frequency	typ.40		Hz
C_I	Input pin capacitance		typ. 47		nF
$V_{I\text{-range}}$	Input voltage range	Voltage mode (Note 1)	-0,5	33	V
		Current mode (Note 1)	-0,5	30	V

Note 1: Exceeding the max value might cause damage to input.

Epec Oy reserves all rights for improvements without prior notice

4.6.2 Functional Block Diagram

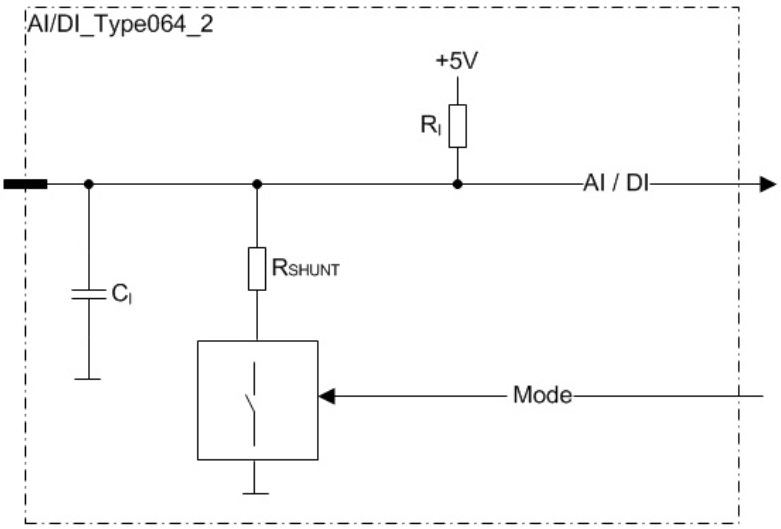

Epec Oy reserves all rights for improvements without prior notice

4.7 AI/DI_Type064_3

- These pins are analog inputs
- The pins can be configured either as a current input or as a voltage input.
- There is a control signal for selecting:
  - Voltage mode: High impedance input for signal from 0 to 5 V
  - Current mode: Low impedance input for signal from 0 to 22 mA
- The input impedance is controlled by a bit in output memory (%Q).



When configured to current mode, analog inputs can be protected against overvoltage by using *3000AnalogInputProtection* programming library. For more information, refer to *Epec Programming and Libraries Manual*.

4.7.1 DI

- These pins can also be used as digital inputs by using an application library.
- The pin must be configured to voltage mode when using as digital input


Electrical characteristics

Symbol	Parameter	Conditions	Min	Max	Units
V_I	Input Voltage measuring range		0	5	V
R_I	Input Resistance	Voltage mode (referenced to GND)	typ. 82,0		kΩ
		Current mode	typ. 220		Ω
I_I	Input Current measuring range		0	22,7	mA
I_E	Input Error	Voltage mode		0,18	V
		Current mode		0,8	mA
BW	Input Low Pass Filter Bandwidth	-3 dB cut-off frequency	typ. 40		Hz
C_I	Input pin capacitance		typ. 47		nF
$V_{I\text{-range}}$	Input voltage range	Voltage mode (Note 1)	-0,5	33	V
		Current mode (Note 1)	-0,5	30	V

Note 1: Exceeding the max value might cause damage to input.

Epec Oy reserves all rights for improvements without prior notice

4.7.2 Functional Block Diagram

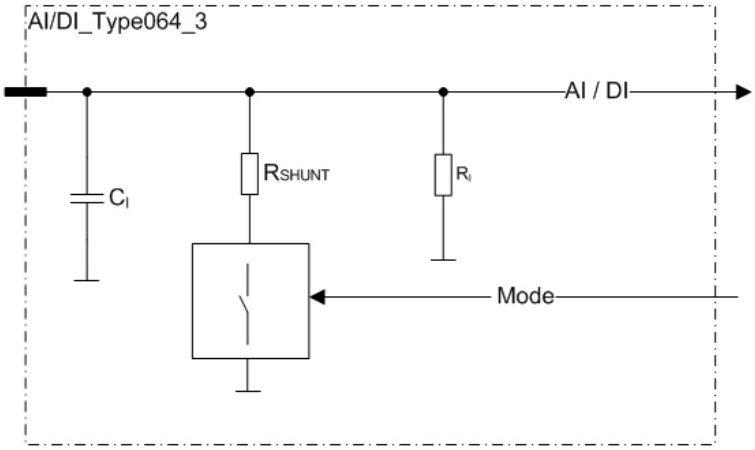

Epec Oy reserves all rights for improvements without prior notice

4.8 DI/PI_Type046_1


- This type of pin is a digital input (DI) including a pulse counting (PI) feature.
- This kind of pins have a pull-up resistor to +5 V
- Pulse inputs can be used as a 1 or 2 channel pulse counter and they have a possibility for reset pulse.
- Inputs of this type are also suitable for quadrature sensor position counting.

Electrical characteristics

Symbol	Parameter	Conditions	Min	Max	Units
R_I	Input Resistance	Referenced to +5 V	typ. 10		kΩ
V_{IH}	Input High Voltage	Overload conditions (Note 1)	4,1	33	V
V_{IL}	Input Low Voltage		-0,5	3,3	V
f_I	Input Frequency (frequency measurement and pulse counting)	(Note 4, 5)		20	kHz
	Input Frequency (digital inputs)	(Note 2, 3)		1/ $2t_C$	kHz
t_I	Input Pulse Width		1	10000	ms
C_I	Input Capacitance		typ. 1		nF

Note 1: Exceeding the max value might cause damage to input.
Note 2: t_C denotes the software cycle time in milliseconds.
Note 3: The pulse width must be greater that the software cycle time. For example with 50/50 pulse ratio, the pulse frequency is 1 / (2*pulse width)
Note 4: The maximum value can be reached with 50 % duty cycle.
Note 5: The maximum frequency sum for all the pins is 40 kHz.

4.8.1 Functional block diagram

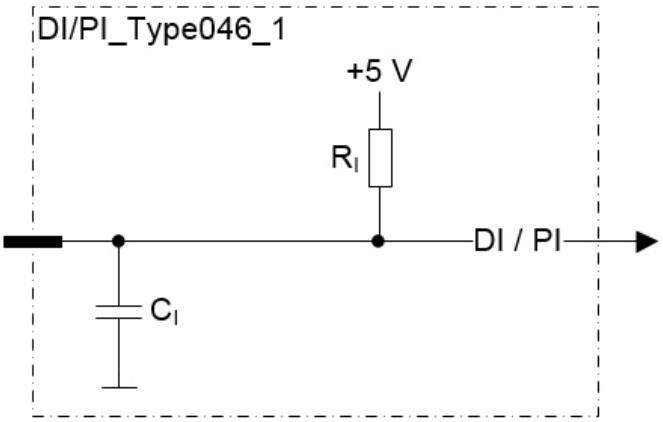

Epec Oy reserves all rights for improvements without prior notice

4.9 AUX OUT


- This kind of pin is an auxiliary supply for external devices (U_{in} / max 4 A)
- The output is enabled by default during power-up
- This output has integrated protection features (overload, overcurrent)
- This kind of pin is a current sourcing output
  - In other words, the pin connects the load to the positive supply voltage.
- The application program can also simultaneously monitor the actual state of the pin.
  - This feature makes it possible to detect short circuits to the ground and short circuits to the power supply.
  - Open loads can not be detected because the internal load resistor is connected to the ground.

Electrical characteristics

Symbol	Parameter	Conditions	Min	Max	Units
R_O	Output Resistance	Output On		0,1	Ω
I_O	Output Current	Output On	0	4	A
$I_{o\text{-}lim}$	Internal current limitation	Output On (Note 1, 2)	typ. 12		A
Digital status					
R_I	Input Resistance	Output Off; Referenced to GND	typ. 10		kΩ
V_{IH}	Input High Voltage	Output Off (Note 3)	3,5	U_{in}	V
V_{IL}	Input Low Voltage	Output Off	-0,5	1,5	V
C_I	Input pin capacitance		typ. 1		nF

Note 1: Current limit for short circuit protection to protect cabling and to limit internal power dissipation.
N**ote 2:** When the limit is exceeded, the output voltage circuit starts to limit the current by switching off the output voltage. The switching does not effect the application software.
Note 3: Exceeding the max value might cause permanent damage.

4.9.1 Functional block diagram

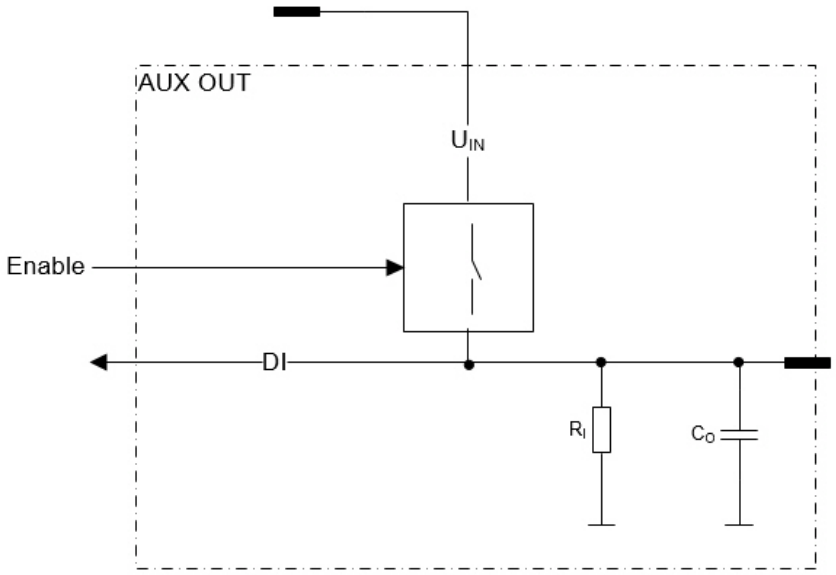

Epec Oy reserves all rights for improvements without prior notice

4.10 Loader BSL Pin

Loader BSL pin's main purpose is for factory use, but it can also be used for resetting the control unit to factory settings (application and all parameters are removed, node-IDs are reset).

In case the control unit (FW version 1.170 or newer) is not responding to CAN messages, use the BSL pin to reset the control unit:

1. Disconnect the power from the control unit.
2. Connect the BSL pin to ground.
3. Power up the unit.
4. Wait for 10 seconds.
5. Power off the unit, disconnect the BSL pin from ground and then power up the unit.
6. The unit is now restored to factory settings.

Epec Oy reserves all rights for improvements without prior notice

4.11 +5V REF_Type041_4

- This is an internally regulated and monitored reference voltage supply for external devices.
- This reference output can be switched on/off by application.

4.11.1 Protection Features

- Overcurrent
- External voltage protection
- Errors are indicated with a fault signal

4.11.2 Voltage Monitoring

The level of the output voltage can be monitored by application.


Electrical characteristics

Symbol	Parameter	Conditions	Min	Max	Units
$V_{o\text{-}level}$	Output voltage	Output On; Unconnected pins	typ. 5		V
R_o	Output Resistance	Output On		0,46	Ω
I_o	Nominal Output Current	Output On;	0	270	mA
$I_{o\text{-}lim}$	Internal Current Limitation	Output On (Note 2, 3)	typ. 370		mA
$I_{o\text{-}sc}$	Short-circuit Current Limit	Output On; Overcurrent	typ. 270		mA
C_o	Output Capacitance		typ. 4,7		uF
$V_{I\text{-}max}$	Max Input voltage	Overload conditions (Note 1)		33	V
Voltage monitoring					
$V_{I\text{-}range}$	Nominal Voltage measuring range		0	5	V
	Fault-signal overvoltage threshold	Overvoltage	Typ. 5,2		V
	Fault-signal activation time	Overvoltage / Overload		10	ms

Note 1: When output voltage is under overload conditions, for example, short circuit to supply voltages. Exceeding the max value might cause damage to output.
Note 2: Current limit for overcurrent protection to limit internal power dissipation.
Note 3: When the limit is exceeded, the output current is regulated. In regulation, the output is switched into overcurrent mode.

Epec Oy reserves all rights for improvements without prior notice

4.11.3 Functional Block Diagram

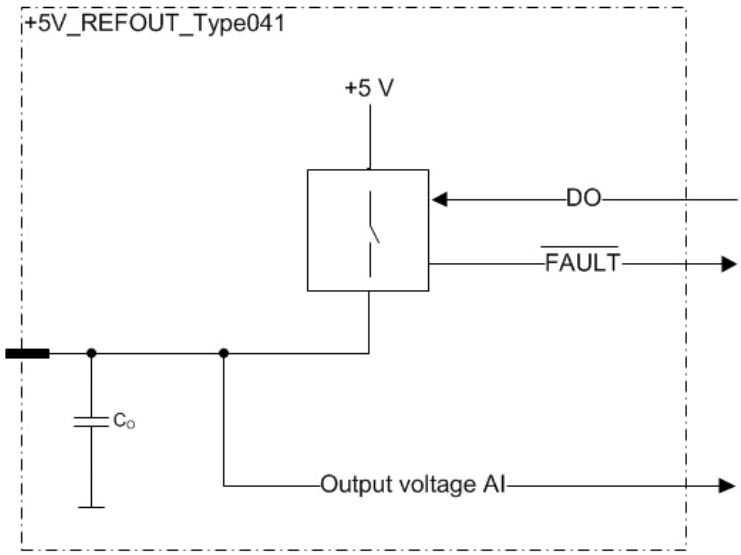

4.11.4 Diagnostics

The +5V reference supply has two diagnostics checks:

- analog output voltage monitoring and
- dedicated digital fault-signal

Both can be used to indicate overload and overvoltage situations. The diagnostics are independent from each other.

For fastest and most reliable error detection, it is recommended to use both output voltage monitoring and fault-flag diagnostics to detect errors.

4.11.4.1 OVERLOAD

The diagnostics can detect overcurrent situation. The fault-signal is activated when excessive current is taken from the output. The output current is regulated when internal current limit is reached. The regulation current is always smaller than the limit. Current regulation causes the output voltage to drop with increasing load. This can be detected, using the output voltage monitoring feature, by setting a minimum (low) value limit for the output voltage.

With large enough loads, the output is switched temporarily off to protect the output from overheating. This is indicated by the fault-signal.
The fault-signal is deactivated, when the error source is removed by decreasing the load or when the output is turned off.

Overheat protection of the +5V REF can cause spurious errors in other analog measurements. Thus it is recommended to turn off the output when fault-signal becomes active.

Epec Oy reserves all rights for improvements without prior notice

4.11.4.2 OVERVOLTAGE

Overvoltage event caused by an external source can be detected by using a combination of the diagnostic features. The fault-signal is activated when pin voltage goes above the fault-signal overvoltage threshold level. If the output voltage monitoring value is 5 V (or more) and the fault-signal is active, it can be determined that an external voltage source is connected to the output pin.

The output pins are protected against external voltages, but it is not recommended to connect external voltage sources to these pins.



In case of a limit violation, the output should be disabled as soon as possible. The control unit can handle short term errors, but long term (e.g. several hours) exposures should be avoided with application/system design. Long term exposure to overvoltage or overload can cause permanent damage to the unit.

Epec Oy reserves all rights for improvements without prior notice

4.12 Power Supply

- Nominal supply voltage 12/24 VDC
- Operating range 8,5…33 VDC
- Undervoltage reset ≤ 8 VDC

4.12.1 Overvoltage Protection

- Max. 70 V (Stresses above this value may cause permanent damage to the module.)
- Control unit has a shutdown circuit which protects the unit and loads against overvoltage. The shutdown circuit cuts off the power feed for the logic and loads in case of overvoltage. The shutdown circuit is activated when voltage reaches circa 35 V. Power feed is restored when supply voltage drops to 32,5 V.

4.12.2 Power Consumption

- Approx. 1,5 W (+24 VDC, no external load)
- Supply Voltage (U_{in}) maximum continuous current 13 A (with full external load)
- GND current sum max 13 A

Power supply pins

Designation	Connector / pin number	Potential
Supply voltage (U_{in}; for logic and power)	X4.4 X4.5	+12/+24 VDC (+8,5…33 VDC)
Ground (for supply voltage)	X4.1 X4.3	GND
Ground	X1.12 X2.12 X3.10 X3.11 X3.12 X3.13	GND (3 A/pin)
Supply outputs		
Auxiliary supply (for external devices)	X3.1 X3.9	U_{in} / max 4 A (max total for all pins together)
Reference supply (for external devices)	X3.2	+5 VDC / max 270 mA



Always use an external fuse to protect the control unit. The fuse is needed for reverse voltage and overload protection.

Epec Oy reserves all rights for improvements without prior notice

Electrical characteristics

Symbol	Parameter	Conditions	Min	Max	Units
V_I	Nominal Input voltage		8,5	33	V
$I_{TOT-max}$	Max Total Current Output			13	A
$V_{I-Load-dump}$	Max Input transient Voltage level	(Note 1)		100	V
V_{I-max}	Max Continuous Input Voltage Level	(Note 2)	-0,5	40	V
V_{I-ovp}	Overvoltage Protection Cut-off Level		33	36,5	V
	Overvoltage Cut-off Hysteresis		typ. 2		V
V_{UVP}	Undervoltage Threshold Level		typ. 7,7		V
Supply voltage monitoring					
$V_{I-range}$	Nominal Input Voltage measuring range		0	46	V

Note 1: Load dump protection according to ISO7637-2: 2004 pulse 5, Us=+123 V. For more information, see *EMC Tests*
Note 2: If the voltage is less than 8,5 V or higher than 33 V, the control unit is in non-operational state.

Epec Oy reserves all rights for improvements without prior notice

5 BUS CONNECTIONS

5.1 CAN Bus

5.1.1 CAN interface

- Higher layer protocol is user programmable (CAN2) communication.
- The physical interface of CAN interface is according to ISO 11898 and CAN 2.0B protocol.
- The downloading of the PLCopen application can only be done via CAN1.
- All interfaces support bit rates 50, 125, 250, 500, 800, 1000 kbit/s
- CAN1 and CAN2 are CANopen compatible and user programmable
- For example CANopen, SAE J1939 or ISOBUS are available for both CANs.
- All interfaces can be configured as listen only mode. An exception is CAN1, which is in boot up normal mode because it is used for CODESYS communication.
- 11-bit and 29-bit message receive and transmit are supported.
- Transmitting of remote frames is supported in all CAN interfaces.
- Receiving one remote frame is supported. This is received for the control unit's own node guard functionality.

5.1.2 CAN bus connection pins

The CAN communication pins and the power supply are connected in the control unit's AMP8 connector as follows:

Designation	Pin number
CAN1 interface, system interface, user programmable communication	X4.2 (CAN H) X4.6 (CAN L)
CAN2 interface, user programmable communication	X4.7 (CAN H) X4.8 (CAN L)
Factory use only, this pin must be left open	X3.15

Epec Oy reserves all rights for improvements without prior notice

6 INTERNAL DIAGNOSTICS

6.1 Temperature and Voltage Monitoring

This unit's internal temperature and incoming operating voltage can be read from the PLCopen addresses with the numerical values and resolutions shown in the following table.

Type	PLCopen address	Precision	Resolution bits	Full reading
Internal Diagnostics				
AI(T_{PCB})	%IW26	≤ ±3,5 %	10	
AI(U_{R2V5})*	%IW29	≤ ±3,5 %	10	5 V
AI(U_{R4V3})*	%IW31	≤ ±3,5 %	10	5 V
AI(U_{R7V3})*	%IW30	≤ ±3,5 %	10	10 V
External Diagnostics				
AI(U_{in})	%IW28	≤ ±3,5 %	10	46 V
AI(+5 V REF)	%IW27	≤ ±3,5 %	10	5 V

** Internal voltage measurement is used for internal voltage level monitoring. MultiTool Creator adds these automatically to code template.*

6.1.1 Temperature

This control unit has one temperature sensor for monitoring PCB area temperature. The temperature information is useful for self diagnostic purposes and safety features.

Symbol	Parameter	Conditions	Min	Max	Units
T_{PCB}	Nominal PCB Temperature measuring range		-40	125	˚C
$T_{PCB\text{-}err}$	Temperature Measurement Error	-40 .. +125 ˚C		+/- 5	% (FS)

Epec Oy reserves all rights for improvements without prior notice

6.2 Error Log

The control unit's internal error log stores the firmware errors in a log.

For more information about the logs and how to read them, refer to *Epec Programming and Libraries Manual MAN000538*.

Epec Oy reserves all rights for improvements without prior notice

7 APPROVALS AND SAFETY

7.1 EMC Tests

Epec 3720 control units are certified according to EMC tests that are described in this section.

The following tables provide a summary of performed EMC tests:

Emission tests according to the test specification EN 61000-6-3 (2007), Amd. A1 (2011)

Emission test	Test method
Radiated disturbance	EN 55016-2-3
Conducted disturbance at the mains ports	EN 55016-2-1

Immunity tests according to the test specification EN 61000-6-2 (2005)

Immunity test	Test method
Electrostatic discharge (ESD)	EN 61000-4-2
Radiated radio-frequency electromagnetic field	EN 61000-4-3
Electrical fast transients (EFT/B)	EN 61000-4-4
Surges	EN 61000-4-5
Conducted radio-frequency field immunity	EN 61000-4-6

Emission tests according to the E/ECE Regulation No. 10, Revision 4

Emission test	Test method
Measurement of radiated interference field strength in the frequency range 30 – 1000 MHz	E/ECE Reg. No. 10, Annexes 7 and 8
Measurement of conducted disturbances	E/ECE Reg. No. 10, Annex 10

Immunity tests according to the E/ECE Regulation No. 10, Revision 4

Immunity test	Test method
Radiated radio-frequency electromagnetic field	E/ECE Reg. No. 10, Annex 9
Immunity to transient disturbances conducted along supply lines	E/ECE Reg. No. 10, Annex 10

The following tables provide more detailed descriptions about the performed EMC tests:

<table>
<tr><th colspan="2">Emission tests according to the E/ECE Regulation No. 10, Revision 4</th></tr>
<tr><td>Radiated disturbance emission test</td><td>Test method E/ECE Reg. No. 10, Annexes 7 and 8, CISPR 25
<table>
<tr><th>Frequency (MHz)</th><th>Limit value (dBmV/m)</th></tr>
<tr><td>30 – 1000</td><td>62/52/63 (Broadband QP)</td></tr>
<tr><td>30 – 1000</td><td>52/42/53 (Narrowband AVE)</td></tr>
</table></td></tr>
</table>

Epec Oy reserves all rights for improvements without prior notice

<table>
<tr><td>Conducted disturbances emission test</td><td>Test method E/ECE Reg. No. 10, Annex 10, ISO 7637-2: 2004/Amd.1:2008
<table><tr><th>Port</th><th>Limit level (V)</th></tr><tr><td rowspan="2">12 V DC input</td><td>+75</td></tr><tr><td>-100</td></tr><tr><td rowspan="2">24 V DC input</td><td>+150</td></tr><tr><td>- 450</td></tr></table></td></tr>
<tr><td colspan="2">Immunity tests according to the E/ECE Regulation No. 10, Revision 4 (2012)</td></tr>
<tr><td>Immunity to transient disturbances conducted along supply lines test</td><td>Test method E/ECE Reg. No. 10, Annex 10, ISO 7637-2: 2004/Amd.1:2008
Performance criterion:
<table><tr><th>Pulse</th><th>Criterion</th></tr><tr><td>1</td><td>C</td></tr><tr><td>2a</td><td>A</td></tr><tr><td>2b</td><td>C</td></tr><tr><td>3a</td><td>A</td></tr><tr><td>3b</td><td>A</td></tr><tr><td>4</td><td>C (12 V)
A (24 V)</td></tr><tr><td>5a</td><td>C</td></tr></table>
12 V input, Pulse:
<table><tr><th>Pulse</th><th>Pulse parameters</th></tr><tr><td>1</td><td>-150 V, R_i 10 Ω, 3 s, 5000 pulses</td></tr><tr><td>2a</td><td>+112 V, R_i 2 Ω, 200 ms, 5000 pulses</td></tr><tr><td>2b</td><td>+10 V, 500 ms, 10 pulses</td></tr><tr><td>3a</td><td>-220 V, 10/90 ms, 60min</td></tr><tr><td>3b</td><td>+150 V, 10/90 ms, 60min</td></tr><tr><td>4</td><td>t_d 40 ms -7,0 V, 20 s -6 V, 10 pulses</td></tr><tr><td>5a</td><td>t_d 400ms, R_i 0,5 Ω, +70 V, 1 pulses
t_d 100ms, R_i 10 Ω, +123 V, 1 pulses</td></tr></table>
24 V input, Pulse:
<table><tr><th>Pulse</th><th>Pulse parameters</th></tr><tr><td>1</td><td>-600 V, R_i 50 Ω, 3 s, 5000 pulses</td></tr><tr><td>2a</td><td>+112 V, R_i 2 Ω, 200 ms, 5000 pulses</td></tr><tr><td>2b</td><td>+20 V, 500 ms, 10 pulses</td></tr><tr><td>3a</td><td>-300 V, 10/90 ms, 60min</td></tr><tr><td>3b</td><td>+300 V, 10/90 ms, 60min</td></tr><tr><td>4</td><td>t_d 100 ms -12 V, 10 s -5 V, 1 pulses</td></tr><tr><td>5a</td><td>t_d 350ms, R_i 1 Ω, +70 V, 1 pulses
t_d 100ms, R_i 10 Ω, +123 V, 1 pulses</td></tr></table></td></tr>
</table>

Epec Oy reserves all rights for improvements without prior notice

Immunity of ESAs to electromagnetic radiation

Test method E/ECE Reg. No. 10, Annex 9, ISO 11452-2:2004, ISO 11452-4:2005, Cor 1: 2009
Performance criterion: A

Specification	Step	Dwell time	Frequency Range (MHz)	Test level
Modulation AM80% 1 kHz	5%	3 s	20-80	60 mA
Modulation AM80% 1 kHz	2%	3 s	80-800	30 V/m
PM 577/4600 µs	1%	3 s	800-1000	30 V/m
PM 577/4600 µs	1%	3 s	1000-2000	30 V/m

Classification of functional status

Class A:
All functions of a device/system perform as designed during and after exposure to disturbance.

Class B:
All functions of a device/system perform as designed during and after exposure to disturbance. However, one or more of them can go beyond specified tolerance. All functions return automatically to within normal limits after exposure is removed. Memory functions shall remain class A.

Class C:
One or more functions of a device/system do not perform as designed during exposure but return automatically to normal operation after exposure is removed.

Class D:
One or more functions of a device/system do not perform as designed during exposure and do not return to normal operation until exposure is removed and a device/system is reset by simple “operator/use” action.

Class E:
One or more functions of a device/system do not perform as designed during exposure and cannot be returned to operation without repairing the device/system.

EN 61000-6-3 (2007), Amd. A1 (2011)
Electromagnetic compatibility-generic emission standard part 6-3: residential, commercial and light industry

Radiated disturbance emission test

Test method EN 55016-2-3

Frequency (MHz)	Limit value (dBmV/m)
30 – 1000	30/37 (QP)

Conducted disturbance at main ports emission test

Test method EN 55016-2-1

Frequency (MHz)	Limit value (dBmV)
0,15 - 30	66/56/60 (QP)
0,15 - 30	56/46/50 (AVE)

Epec Oy reserves all rights for improvements without prior notice

<table>
<tr><th colspan="2">EN 61000-6-2 (2005)
Electromagnetic compatibility-generic immunity standard
part6-2: industrial environment</th></tr>
<tr><td>Conducted radio-frequency common mode immunity test</td><td>Test method EN 61000-4-6
Performance criterion A
<table><tr><th>Specification</th><th>Port</th><th>Test level</th></tr><tr><td rowspan="2">Frequency range 0,150-80 MHz, Modulation AM80% 1 kHz, Dwell time 2 s</td><td>DC input port</td><td>10 V_{RMS}</td></tr><tr><td>Signal ports</td><td>10 V_{RMS}</td></tr></table></td></tr>
<tr><td>Radiated radio-frequency electromagnetic field immunity test</td><td>Test method EN 61000-4-3
Performance criterion A
<table><tr><th>Specification</th><th>Range (MHz)</th><th>Test level</th></tr><tr><td rowspan="2">Modulation AM 80% 1 kHz, Dwell time 2 s</td><td>80-1000</td><td>10 V/m</td></tr><tr><td>1000-2700</td><td>10 V/m</td></tr></table></td></tr>
<tr><td>Electrical fast transient (EFT/B) immunity test</td><td>Test method EN 61000-4-4
Performance criterion B
<table><tr><th>Test pulse</th><th>Port</th><th>Test level</th></tr><tr><td rowspan="2">Repetition frequency 5 kHz, Duration 1 minute</td><td>DC input port</td><td>± 2,0 kV</td></tr><tr><td>Signal ports</td><td>± 1,0 kV</td></tr></table></td></tr>
<tr><td>Surge Immunity</td><td>Test method EN 61000-4-5
Performance criterion B
<table><tr><th>Specification</th><th>Port</th><th>Path</th><th>Test level</th></tr><tr><td rowspan="2">Pulses: 5
Repetition rate: 60 s</td><td rowspan="2">DC Input port</td><td>Line to Line</td><td>± 0,5 kV</td></tr><tr><td>Line to Ground</td><td>± 0,5 kV
± 1,0 kV</td></tr></table></td></tr>
<tr><td>Electrostatic discharge (ESD) immunity test</td><td>Test method EN61000-4-2
Performance criterion B
<table><tr><th>Discharge mode</th><th>Test level (kVp)</th></tr><tr><td>Contact</td><td>± 2, ± 4, ± 6</td></tr><tr><td>Indirect contact</td><td>± 2, ± 4, ± 6, ± 8</td></tr><tr><td>Air</td><td>± 2, ± 4, ± 8</td></tr></table></td></tr>
</table>

Epec Oy reserves all rights for improvements without prior notice

Performance criteria for immunity tests

Performance criterion A:
The EUT shall continue to operate as intended during and after the test. No degradation of performance is allowed.

Performance criterion B:
The EUT shall continue to operate as intended after the test. However, moderate degradation of performance is allowed. No change of actual operating state or loss of memory functions is allowed.

Epec Oy reserves all rights for improvements without prior notice

Epec Oy

Postal address
PL/P.O.Box 194
FIN-60101 Seinäjoki, Finland

Phone
+358-(0)20-7608 111

Internet
www.epec.fi

7.2 Environmental Tests

The following environmental tests have been performed to Epec 3720 control units:

Temperature			
Test	**Temperature**	**Duration/ Exposure time**	**Remarks**
Cold IEC 60068-2-1 (2007-03), Test Ad	-45 ˚C	16 h	1 ˚C/min
Dry heat IEC 60068-2-2 (2007-07), Test Bb	70 ˚C	16 h	1 ˚C/min
Damp heat cycling IEC 60068-2-30 (2005-08), Test Db	+25 ˚C/+55 ˚C		rel. humidity >90% cycle duration 24h six test cycles
Change of temperature IEC 60068-2-14 (2009-01), Test Na	-50 ˚C/+60 ˚C	3 h	change time between extreme temperatures 1-2 min 5 test cycles
Change of temperature IEC 60068-2-14 (2009-01), Test Nb	-40 ˚C/+70 ˚C	3 h	change of temperature 10 ˚C/min 2 test cycles

Mechanical resistance		
Test	**Duration and direction**	**Remark**
Shock test IEC 60068-2-27 (2008-02) Test Ea	pulse duration 6 ms 500 impulses in six directions	half sine pulse shape peak acceleration 500 m/s^2
Shock test IEC 60068-2-27 (2008-02) Test Ea	pulse duration 4 ms 100 impulses in two directions	half sine pulse shape peak acceleration 750 m/s^2 and 1000 m/s^2
Vibration, random IEC 60068-2-64 (2008-04), Test Fh	test duration 60 min in every three test direction	ASD-level 5 m^2/s^3, 10 … 200 Hz ASD-level 1,0 m^2/s^3, 200 … 500 Hz total spectral acceleration 3,54 grms
Vibration, random IEC 60068-2-64 (2008-04), Test Fh	test duration 10 min in one test direction at each level	frequency range 10...500 Hz ASD-level 0,1 g²/Hz (10,0 m^2/s^3), 10...200 Hz ASD-level 0,02 g²/Hz (2,0 m^2/s^3), 200...500 Hz, 5,00 grms ASD-level 0,2 g²/Hz (20,0 m^2/s^3), 10...200 Hz ASD-level 0,04 g²/Hz (4,0 m^2/s^3), 200...500 Hz, 7,05 grms ASD-level 0,4 g²/Hz (40,0 m^2/s^3), 10...200 Hz ASD-level 0,08 g²/Hz (8,0 m^2/s^3), 200...500 Hz, 9,96 grms ASD-level 0,8 g²/Hz (80,0 m^2/s^3), 10...200 Hz ASD-level 0,16 g²/Hz (16,0 m^2/s^3), 200...500 Hz, 14,08 grms

Epec Oy reserves all rights for improvements without prior notice


		ASD-level 1,45 g²/Hz (145,0 m²/s³), 10...200 Hz ASD-level 0,29 g²/Hz (29,0 m²/s³), 200...500 Hz, 19,04 grms	
Free fall, IEC 60068-2-31 (2008-05), Test Ec	one fall / direction on each surface and corner	fall height 100 cm	
Corrosion			
Test	**Temperature**	**Duration**	**Concentration**
Salt spray test ISO 9227	+35 °C	24 h	5 % NaCl
Tightness tests for IP67			
Test	**Duration and procedure**	**Remark**	
Dust test for IP6X according to IEC 60529	exposed to the free settling dust for 2 hours underpressure during the test 1,8 kPa flow rate of the air 0,3 l/min	no deposit of dust noticed inside complies with the requirements stated for the protection class IP6X	
Water test for IPX7 according to IEC 60529	immersion duration 30 minutes immersion depth 1000 mm water temperature +20 °C	no ingress of water noticed inside complies with the requirements stated for the protection class IPX7	

Epec Oy reserves all rights for improvements without prior notice


8 MECHANICS AND CABLING

8.1 Unit Dimensions

Unit dimensions from the top:

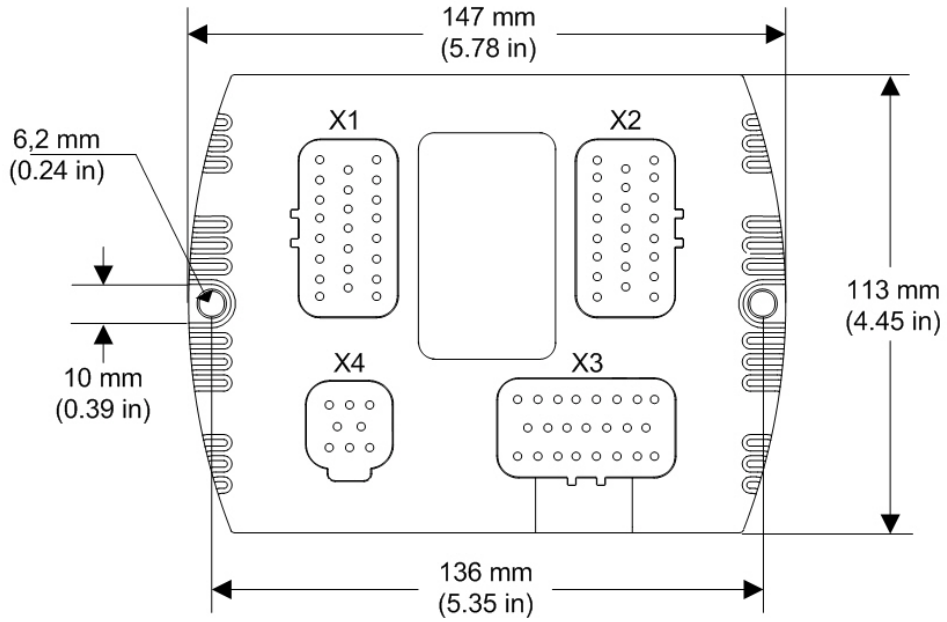

Unit dimensions from the side:

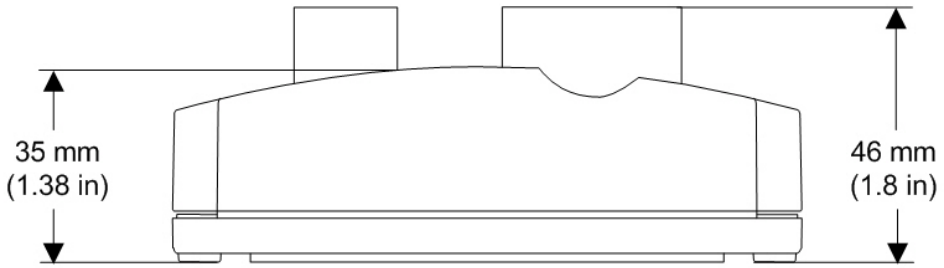

Epec Oy reserves all rights for improvements without prior notice

8.2 Mounting and Cleaning


Control unit mounting location should be planned so that the machine's washing does not damage the unit.

A direct water jet towards the control units should be avoided, especially when using high pressure. Also, the use of any such solvent that causes damage to electronic devices should be avoided when handling the control units.

When cleaning the control unit, do not use highly alkaline / acidic substances, too hot water, or too heavy mechanical abrasion.


In moist conditions, the unit must be mounted and oriented so that the connectors are not filled with water.

- The mounting is done with 2 screws, for example M6 according to DIN 912
- It is possible to use a spring washer under the screw head
- Mounting must be done on to a conductive metal base. The control unit's aluminum housing must have a galvanic connection to the machine frame
- The paint must be removed from the control unit under each screw head before mounting, to ensure a galvanic connection to the control unit frame. Also, remove the paint from the machine frame, where the control unit will be attached.
- Reserve 10 cm installation space for the connector cables
- Mounting position must be horizontal or vertical to allow water, etc. flowing away from connectors, see the figures below.

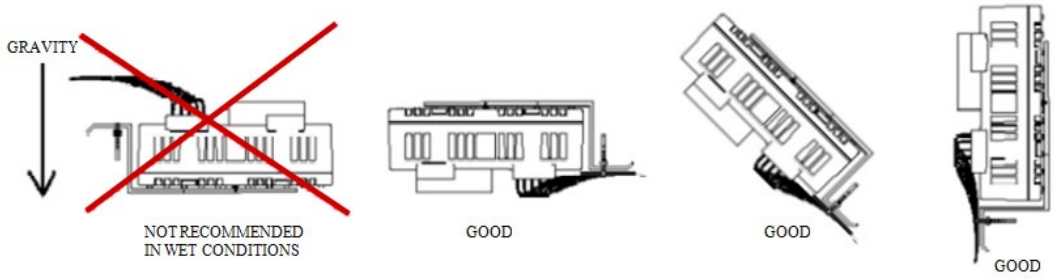


- If a separate Epec shock protection cover is mounted, it is recommended to use fastening bolts delivered by Epec.
- The following figure shows how the shock cover is mounted on top of the unit with screws (unit mounting screws have threads for unit cover screws):

Epec Oy reserves all rights for improvements without prior notice

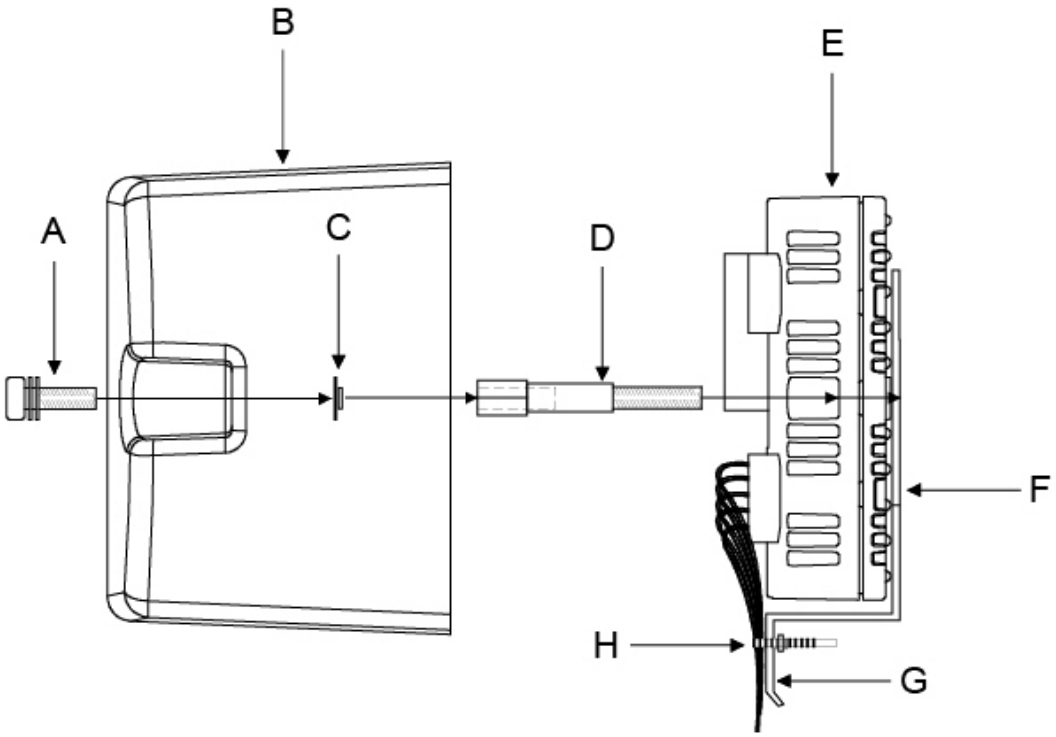


A = Shock cover mounting screw
B = Shock cover
C = Stopper washer
D = Shock cover mounting screw
E = Control unit
F = Shock cover mounting bracket
G = Shock cover base knob
H = Wires are binded to the base knob with cable ties

- If the unit is mounted upside down with a unit cover in wet conditions, it is recommended to drill a small hole on the cover to allow water flow away on the bottom of the cover. In the picture below, the red arrow points an example location of a leaking hole:

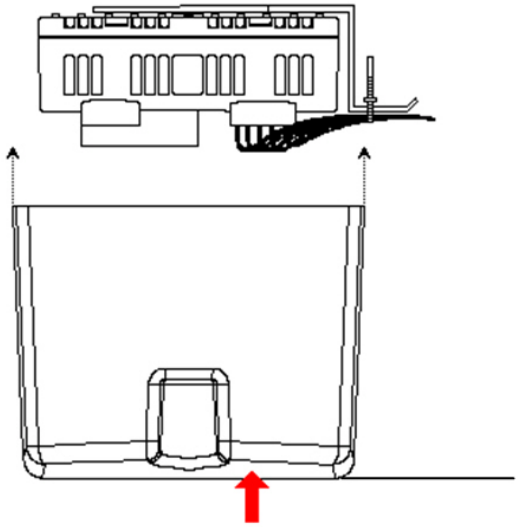


Epec Oy reserves all rights for improvements without prior notice

Shock cover dimensions from above:

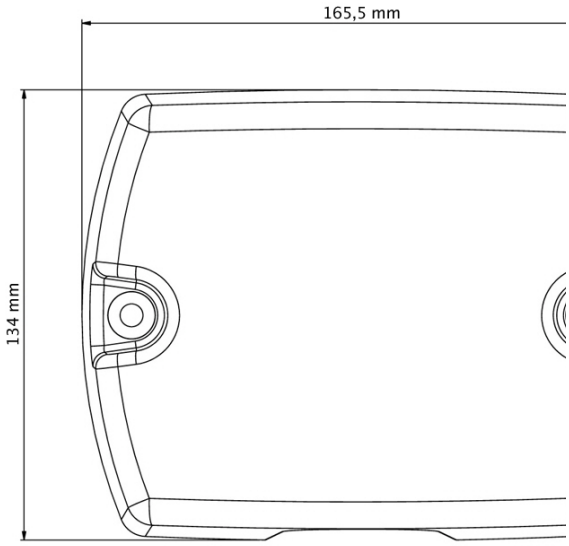

Shock cover dimensions from the side:

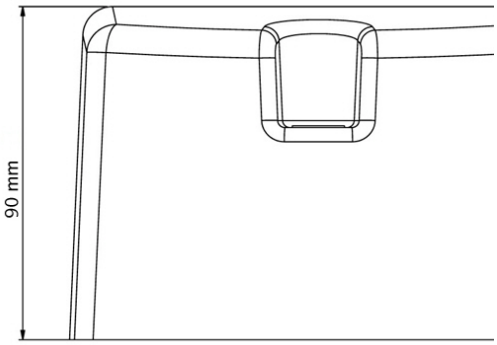

Epec Oy reserves all rights for improvements without prior notice

Epec Oy


Postal address
PL/P.O.Box 194
FIN-60101 Seinäjoki, Finland

Phone
+358-(0)20-7608 111

Internet
www.epec.fi

8.3 Plugging and unplugging the connectors

Epec control units use heavy duty gold plated, locked and sealed AMPSEAL connectors. The following figure shows an example of an AMPSEAL connector:

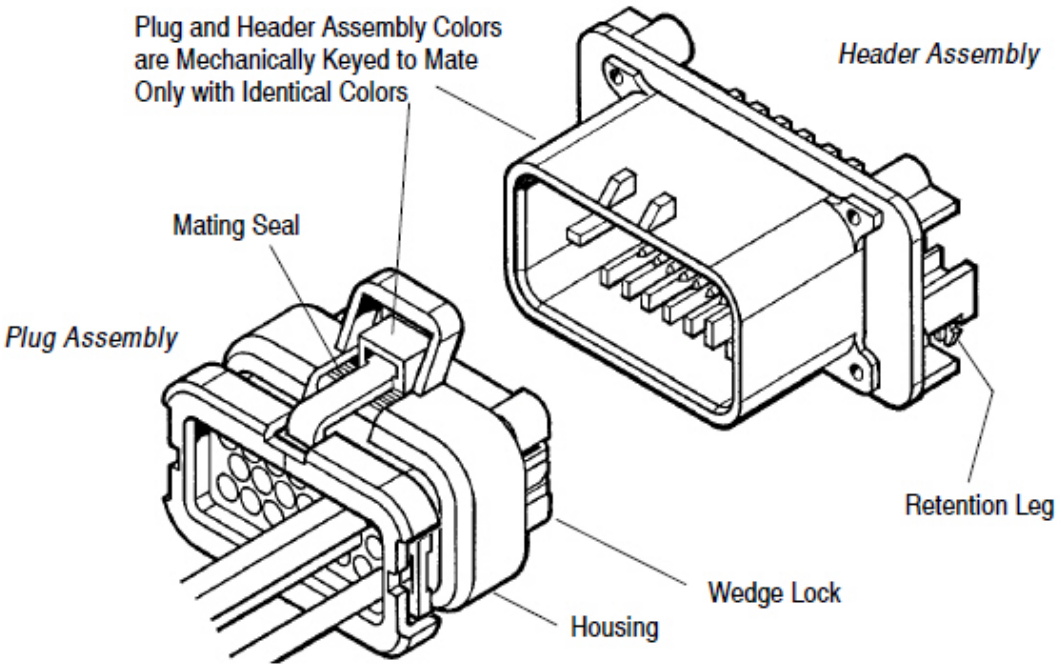


- Gold plated AMPSEAL connectors pack a current of 15 amperes per contact and tolerate operating temperature range.
- All module connectors are mechanically keyed to mate only with identical colors (blue, grey and black).

When connecting, make sure that:

- connectors are pressed down to the bottom and that they are locked
- connectors are clean (avoid moisture or dirt inside the connector)
- unused connectors are covered with empty connectors of the same color (this helps to keep the control unit connectors dry and protected)
- all cables, connectors and tools are of correct type, and sufficiently high quality, and suitable for this kind of use (protection for moisture, mechanical stability, power durability, coupling resistance among other things)
- there is a sufficient margin (slack) left in the cables to prevent the torsion of the connectors
- wires are bound to the control unit cover base knob with cable ties

The following figure describes some general instructions about the connectors.

Epec Oy reserves all rights for improvements without prior notice

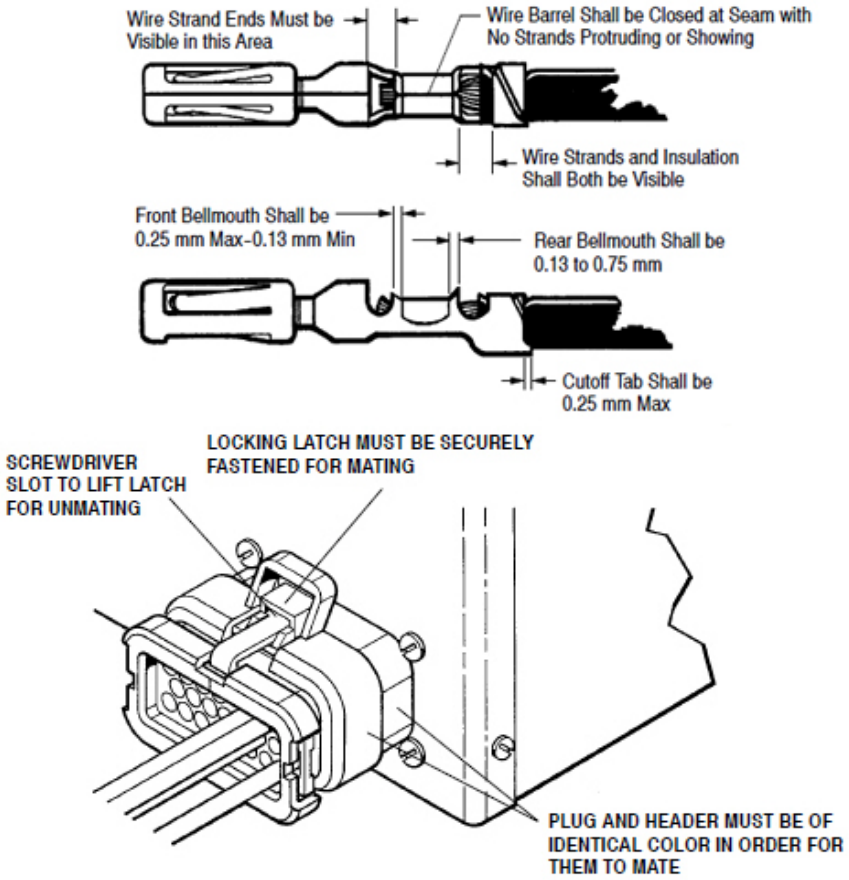

Refer to AMP Application Specification 114-16016 for more detailed information on connectors and cable recommendations.

Ordering codes for the AMPSEAL connectors, crimps and tools are listed in Section *Accessories and Ordering Codes*.

Epec Oy reserves all rights for improvements without prior notice

8.4 Cabling

8.4.1 System Topologies



Generally, cabling should be properly designed and documented to help the initial assembly and maintenance.
It is highly recommended to mark each cable on both ends to avoid confusion and errors.



The cables must be run in a safe route along the machine frame.
When routing cables, avoid interfering objects and pay particular attention to moving parts of the machine.
It is also good to minimize the amount of the connection points of the cable harness to maximize reliability.
Also, all valid safety instructions should be observed when coupling.

- The control units are connected with each other using standardized CAN bus.
- The idea of the Epec embedded control system, is that all the control units are installed close to sensors, encoders and other equipment connected to them.
-
    - This way the amount of the traffic on the CAN bus is minimized and connections can be made using short wires.


Termination resistors

- Generally, the bus cable is terminated at both ends with termination resistors (ISO 11898:1993).
- External termination resistor (120 Ω) has to be connected at both ends between CAN H and CAN L.




The cable lengths presented here are approximates. Actual cable lengths also depend on the cable quality, the cable type and also on the machine environment (possible interference).


Epec Oy reserves all rights for improvements without prior notice

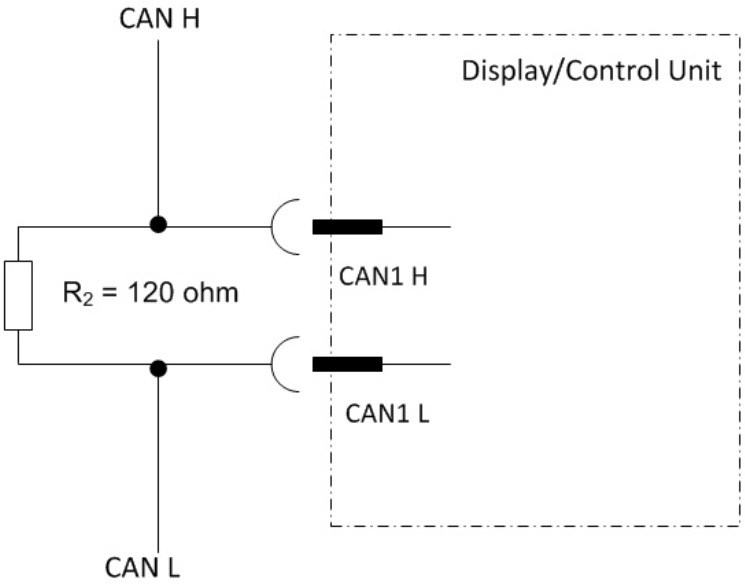

Example1. The figure shows a connection example of an external termination resistor in CAN1

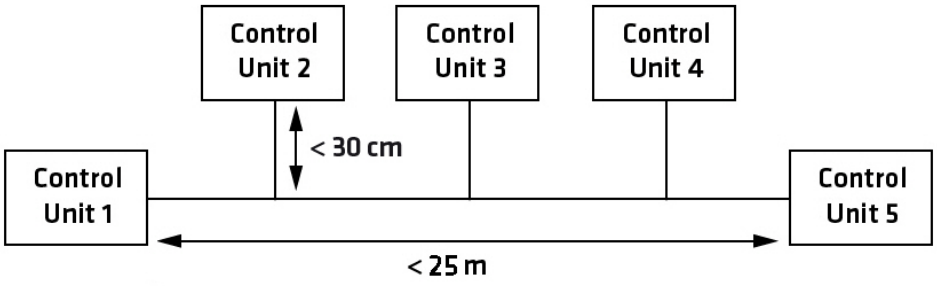


Example 2. Control system topology in theory with maximum bus speed (1000 kbit/s); Control Units in traditional bus arrangement. Termination resistor must be connected at control unit 1 and control unit 5. For more information about the bus speeds, refer to CiA DS-102 standard.

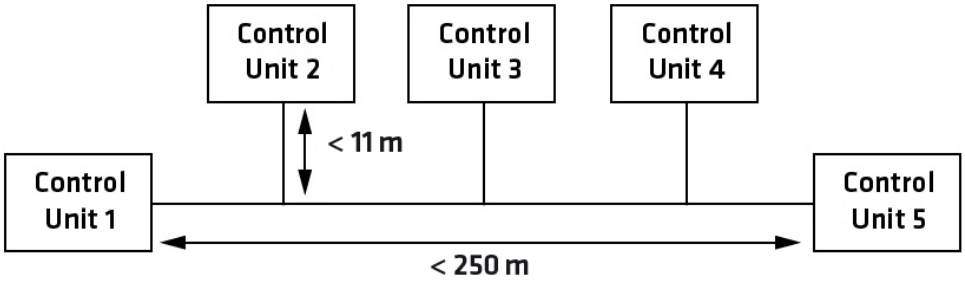

Example 3. Control system topology in theory with 250 kbit/s bus speed; Control Units in traditional bus arrangement. Termination resistor must be connected at

Epec Oy reserves all rights for improvements without prior notice

control unit 1 and control unit 5. For more information about the bus speeds, refer to CiA DS-102 standard.



Example 4. The usage of the termination resistor (TR) in a conventional bus. The maximum recommended bus length is directly dependent on the bus speed.
In theory, the maximum length with the maximum speed can be up to 25 meters. If the bus speed is lower, the length can be extended.
The maximum length of the bus depends on the bus speed. For more information about the bus speeds, see the table below / refer to CiA DS-102 standard.

The following table shows some baud rates in general purpose CAN bus networks as well as the maximum bus length for a given baud rate, that CAN in Automation (CiA) international users and manufacturers group has recommended to be used. For more information, refer to CiA DS-102 standard.

CAN bus baud rates and bus lengths according to CiA DS-102 standard

Baudrate	Bus length
1 Mbits/s	25 m
800 kbits/s	50 m
500 kbits/s	100 m
250 kbits/s	250 m
125 kbits/s	500 m
50 kbits/s	1000 m

Epec Oy reserves all rights for improvements without prior notice

8.4.2 CAN Bus Cabling

The CAN bus cable is the neural backbone of the whole system and should be designed and constructed with extra care.


- In all Epec 3700 series control units, the bus connection can be found in black AMP 8 pin connector.
- For information about the CAN bus lengths and baud rates, refer to section *System Topologies*.

Cable

- It is recommended to use high quality and twisted (approx. 1 round / 1 inch) CAN bus cable.
- Normal UTP (Unshielded Twisted Pairs) cable is well suited for distances under approximately 10 meters.
- In longer distances, and especially if there is possibility for electromagnetic interference, it is highly recommended to use shielded and twisted cable for CAN bus, also for shorter distances.
- To avoid electromagnetic interference (EMI), locate the bus cable as far away from high-current carrying cables as possible. Generally, the amount of the connections and connectors should be minimized to maximize security; also all connections should be done carefully.
- The shield grounding must be done only in one end of the cable


Cable shield

Connection example when there is a GND pin available in the control unit:

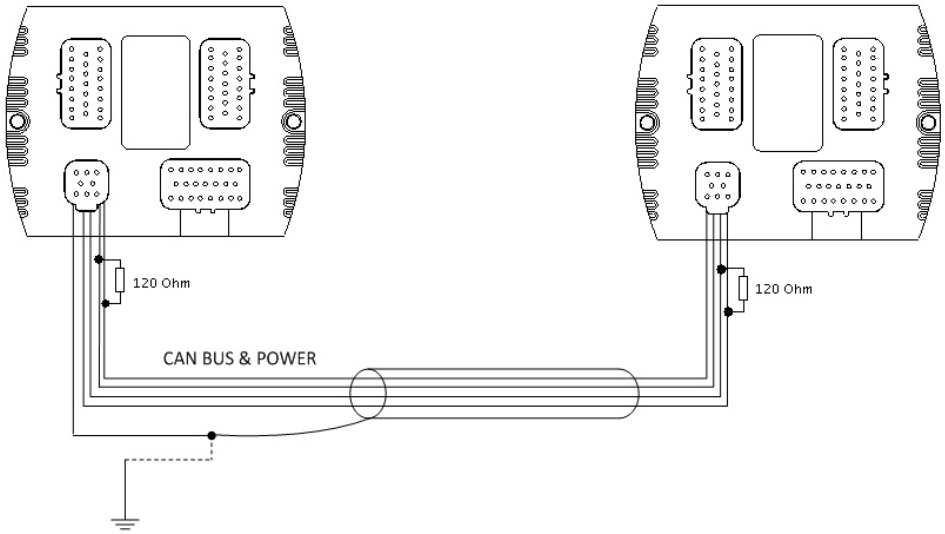

Epec Oy reserves all rights for improvements without prior notice


Connection example when there is not a GND pin available in the control unit:

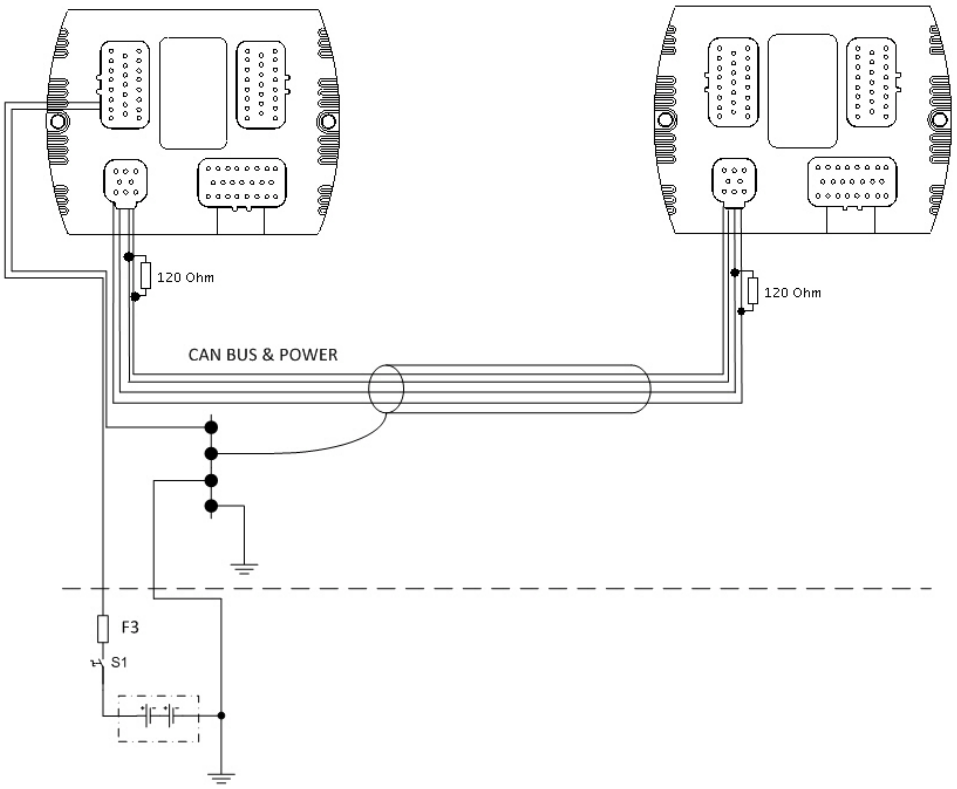

8.4.2.1 CAN cabling for system developers

The following figure describes cabling for CAN communication between Epec control units and a PC.
Ordering codes for the needed hardware are included in the figure.

Epec control units with AMP8 connector:

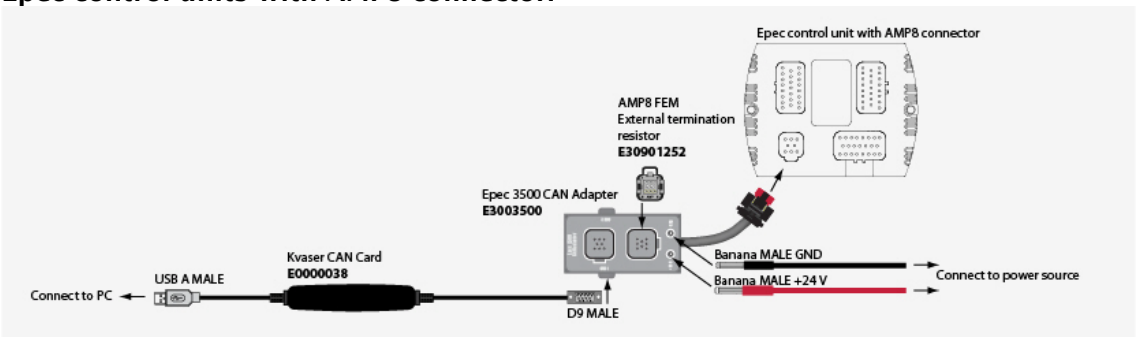

Epec Oy reserves all rights for improvements without prior notice


8.4.3 I/O Cabling

Closed circuit loops are always recommended and mandatory when you are using DO or PWM pin as an input.
Closed circuit loop means that the current from the control unit to the sensor must return to the same control unit, see the figures below.

To ensure correct measurement, reserve separate GND pin(s) for AI pin(s) and don't use it/them for any other purposes. See cabling example below.

- The cabling for encoders etc. is in many cases supplied together with them.
- In many cases, very simple basic cable may be used, e.g. automobile R2 cable (0,5 or 1,0) by NK Cables.
- Dimensions of the cable should be appropriate for AMP contacts (so that crimping is possible).
  - Refer to AMPSEAL table (in section *Accessories and Ordering Codes*) for dimensions.
  - Take extra care for protecting the cables against physical wear and damage.
- Only one wire can be connected to one AMPSEAL connector pin. However, if more than one wire has to be connected to one connector pin, it has to be connected by branch wiring.
- Some voltage inputs use relatively low voltages.
  - Consider using shielded cables for these encoders etc. especially for longer distances to increase safety
- Using shielded cable is recommended also in joystick connections.


The following figure describes four different ways to connect closed circuit loop through the control unit:

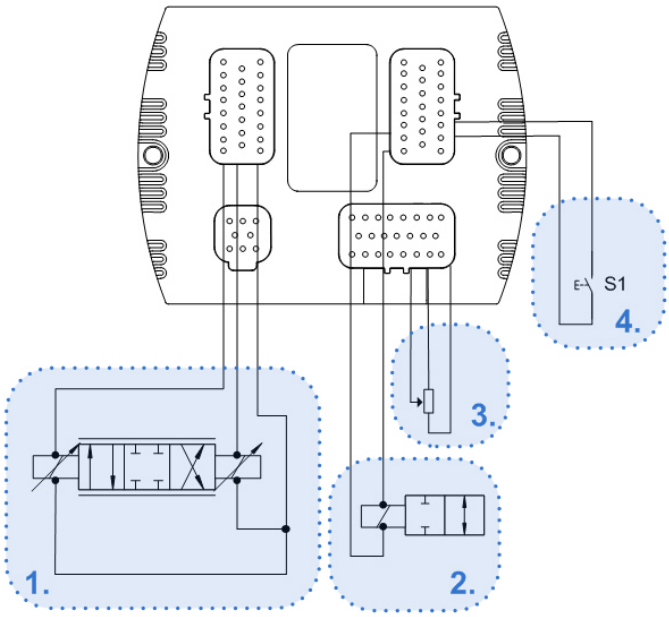

1. Proportional valve
2. ON/OFF valve
3. Joystick
4. ON/OFF switch

Epec Oy reserves all rights for improvements without prior notice

AI - GND cabling examples (use separate GND pin for AI pins):

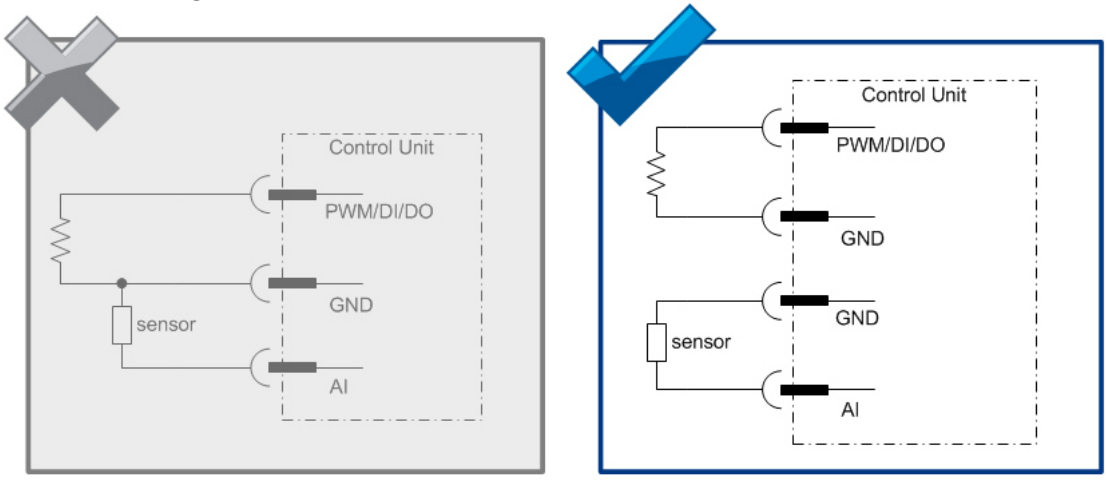

- sensors and encoders must be wired according to the closed-loop principle, i.e. the power for the sensors and encoders is supplied by the control unit they are connected to. This way, it is possible to avoid potential harmful differences, so the MOSFET driven output power switching operates properly.

When designing the sensor and encoder connections, observe single-point grounding. Each control unit connector has several GND pins which should be used.

Refer to section Power supply pins and limitations for accurate pin allocation of connectors.

Epec Oy reserves all rights for improvements without prior notice

8.4.4 Power Supply Cabling



The maximum continuous current per pin is 10 A.



The maximum fuse that can be used per pin is 10 A.
The fuse serves as short-circuit protection.



The power for sensors, encoders and other equipment should be supplied from the very same unit that the equipment is connected to, to ensure the best performance of the system. No external power (or ground) connections are allowed.

- See section *Power Supply* for accurate pin allocation of the connectors when using Epec 3720 control unit.
- Single point grounding should be used for power supply for all control units.
- Epec recommends using doubled power cabling, though in the picture below both power cables are doubled. By using double cables one gets more area for power cables and therefore more current handling capabilities.

Generally the required area of the power cable (Cu) can be determined in following way:
Area = Max Current (A) x Nominal Resistance (Ωm) x Cable Length (m) / Max Voltage Drop (V)

Epec recommends the maximum voltage drop measured against ground potential to be at maximum 2 volts. For extra safety 1 volt should be used as a limit.


Example:
Let's assume that the machine has a 15 meters boom cable made of copper. There will be estimated 5 amps current, so the recommended cable area would be:
5 A x 0,0172*10-6 Ωm x 15 m / 2 V = 0,7 mm^2

Especially in those cases, where the formula above gives greater cable dimensions that can be fitted in AMPSEAL contacts, it is recommended to use doubled power cabling.


If power cables are inside the same cable with CAN bus cables, the maintenance of the system is generally easier.

Epec Oy reserves all rights for improvements without prior notice

Power supply's wiring example when max 13 A is needed:

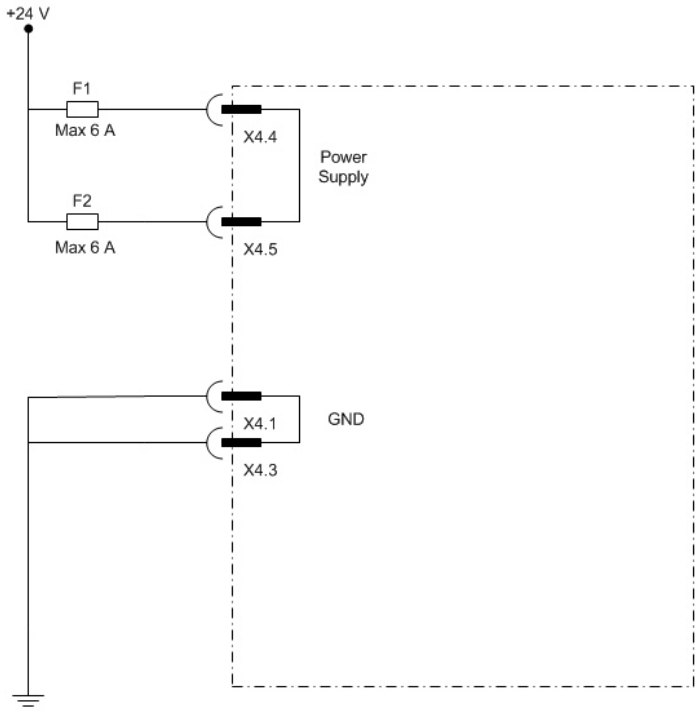


Power supply's wiring example when max 10 A is needed:

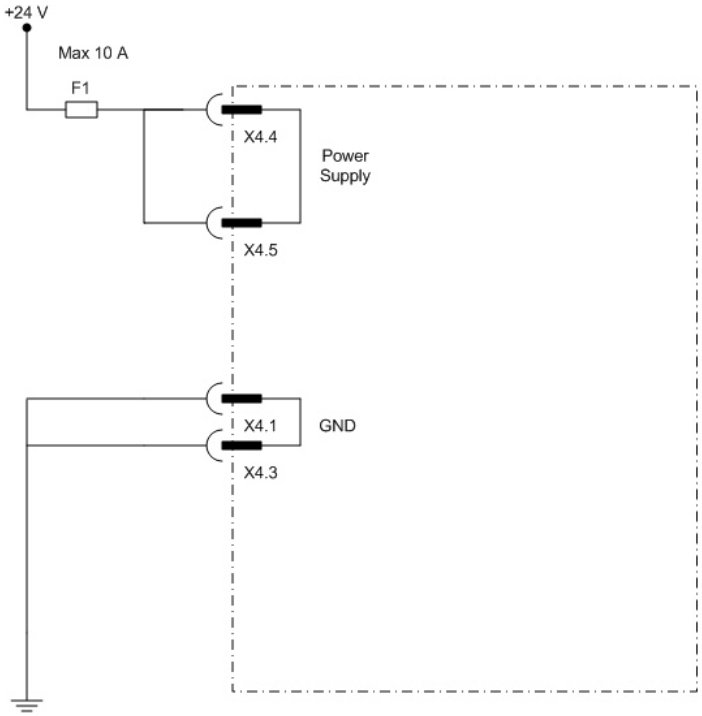


Epec Oy reserves all rights for improvements without prior notice

Power supply's wiring example when max 10 A is needed:

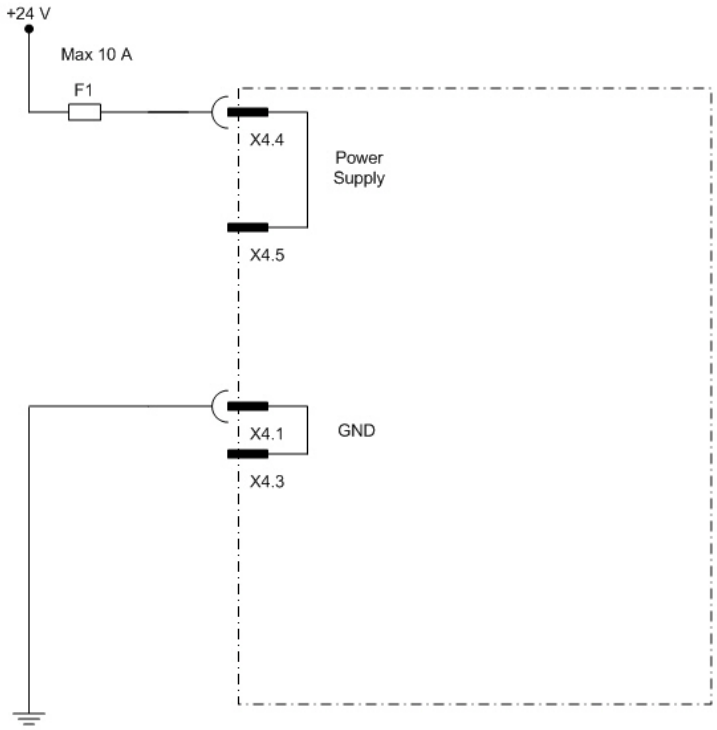

- The power for other unit is supplied through the black AMP8 connector.
- The following figure shows a wiring example of the power supply. Single point grounding should be used for power supply for all units:

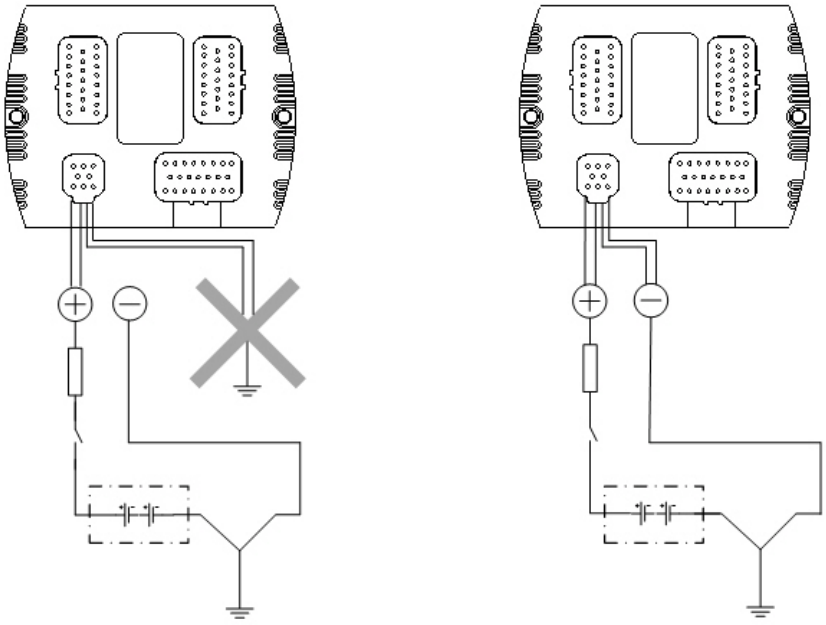

Epec Oy reserves all rights for improvements without prior notice

8.4.4.1 Emergency Stop



In all European Community countries, the emergency stop should be implemented in accordance with standard EN ISO 13850, which complies to the EC Machinery directive 2006/42/EC. In other countries, the emergency stop should be implemented according to local standards and/or to local legislation.

Epec Oy reserves all rights for improvements without prior notice

8.5 Welding



Welding causes some high current flows and voltage peaks in the machine. It should be noted that the electronics of the control system may be damaged, if the welding current can get through the control unit itself. So, when welding, it should be taken care to prevent high currents from going through the control units or through the CAN bus.

Follow carefully the following instructions.



Disconnect all the connectors from the control units before welding.



Generally, even if the control system power is disconnected, welding should be done carefully and by following appropriate safety measures. Welding grounding should be connected close to the welding point to avoid long distance high current flow through machine frame.

Epec Oy reserves all rights for improvements without prior notice

8.6 System Examples

Loading machine
Cabin control unit

- reads the joysticks and switches
- controls the boom and bucket
- controls the gearing
- controls the steering and brakes
- controls the lights

Rear frame control unit


- controls the engine
- controls the hydraulic pumps
- controls the rear lights

Tilt sensors

- measures the frame position
- measures the loader position

Display

- gauge
- diagnostics
- software updating

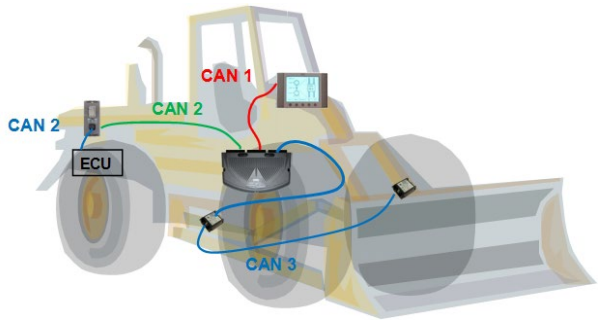


Dumper
Cabin control unit

- reads the joysticks and switches
- controls the engine
- controls the gearing
- controls the driveshaft brake
- controls the steering and brakes
- controls the dump box

Display

- remote connection
- positioning
- gauge
- diagnostics
- software updating

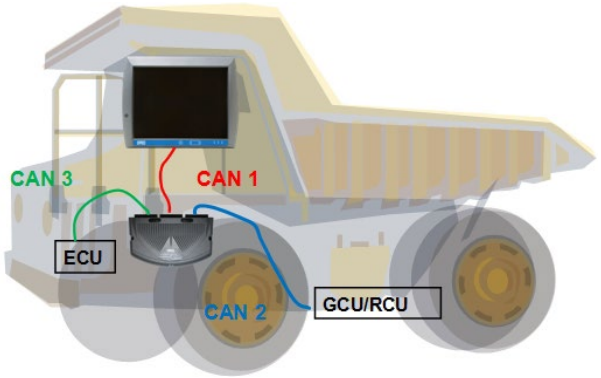


Landfill compactor
Cabin control unit

- reads the joysticks and switches
- controls the engine

Epec Oy reserves all rights for improvements without prior notice

- controls the transmission
- controls the steering
- controls the lights

Tamping sensors
- measures the degree of concentration

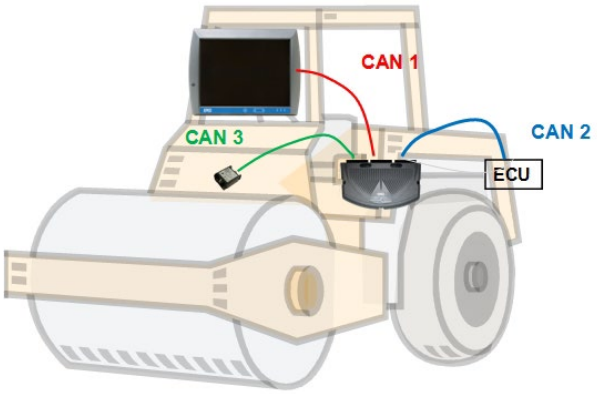


Display
- remote connection
- positioning
- gauge
- diagnostics
- software updating

Backhoe

Cabin control unit
- reads the joysticks and switches
- controls the excavator
- controls the roof lights
- booms' position calculation

Engine control unit
- controls the engine
- controls the front loader
- reads the fluid pressures and temperatures

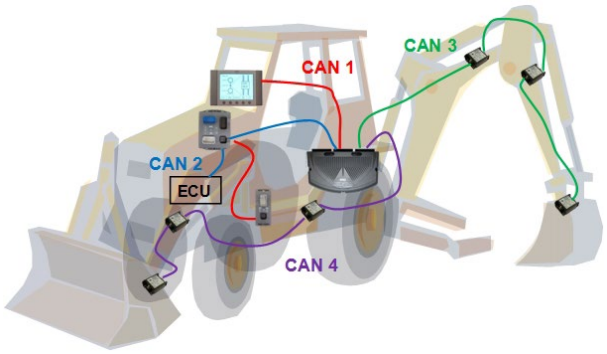

Gearing control unit
- controls the gearing
- controls the suspension

Tilt sensors
- measures the frame position
- measures the excavator and front loader positions

Display
- gauge
- diagnostics
- software updating

Epec Oy reserves all rights for improvements without prior notice

8.7 Accessories and Ordering Codes

Related products

Picture	Product Name	Epec ordering code	Epec data sheet code
	Shock Cover for Epec Control Units	E30C02192	MAN000401
	Epec Simulator Box for Control Unit 2024	E3003503	MAN000411
	3500 CAN Adapter Box	E3003500	MAN000385
	Epec Measuring Adapter	E3002014	MAN000387
-	External termination resistor	E30901252	-
-	Kvaser CAN Card	E0000038	-

Epec Oy reserves all rights for improvements without prior notice

AMPSEAL Connectors

Epec uses gold plated, locked and sealed AMPSEAL heavy duty connectors for all Epec CAN Control Unit Family products to ensure endurance under extreme conditions.

- All connectors are mechanically keyed to mate only with identical colors

AMPSEAL product	TE Connectivity ordering code	Epec ordering code
Contact for AMP plug assembly	770854-3	KX0010
Crimping tool	58529-1	TT0018
AMP 23-pin Plug Assembly, Grey	770680-4	KX0007
AMP 23-pin Plug Assembly, Grey with 2 m leads	-	E30901310
AMP 23-pin Plug Assembly, Black	770680-1	KX0008
AMP 23-pin Plug Assembly, Black with 2 m leads	-	E30901311
AMP 23-pin Plug Assembly, Blue	770680-5	KX0009
AMP 23-pin Plug Assembly, Blue with 2 m leads	-	E30901312
AMP 8-pin Plug Assembly, Black	776286-1	KX0187
AMP 8-pin Plug Assembly, Black with 2 m leads	-	E30901313

AMPSEAL cable dimensions

<table>
<tr><th colspan="2">Size</th><th rowspan="2">Insulation diameter range</th><th>Strip length ±0,4</th></tr>
<tr><th>mm²</th><th>AWG</th><th>AWG</th></tr>
<tr><td>0,5</td><td>20</td><td rowspan="3">1,7
to
2,7</td><td rowspan="4">5,1</td></tr>
<tr><td>0,8</td><td>18</td></tr>
<tr><td>1,4</td><td>16</td></tr>
<tr><td>1,5</td><td>---</td><td>2,2
to
2,4</td></tr>
</table>

Typical hand crimping tool e.g.: AMP Procrimper 58529-1 (TE Connectivity), Epec ordering code TT0018

Epec Oy reserves all rights for improvements without prior notice